

## MicroCNC Safety Screen Assembly Instructions

A plastic screen is included with the MicroCNC range of products to prevent accidental access to dangerous moving parts in the mechanism. This is not a substitute for protective eyewear and other safety procedures, and does not fully prevent access to the moving parts in the CNC, so appropriate care and safety instructions are still vital when using this equipment.


### Equipment needed

To add the screen to the MicroCNC, you will need the following equipment:

- 1) 4x 8mm M3 screws (included with the screen)
- 2) A Pozidriv Screwdriver (included in the accessory pack)
- 3) A 2mm Allen Key (included in the accessory pack)


### Step 1 – Remove the hand wheel from the motor

Use the Allen key to remove the hand wheel and washer from the motor at the front of the unit.

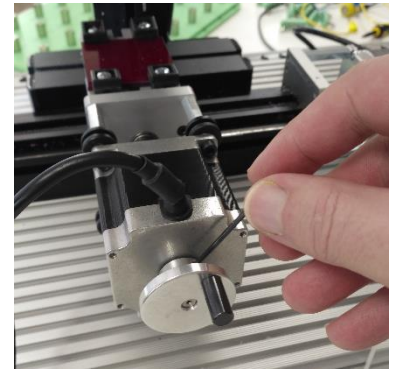

### Step 2 – Fix the screen to the motor housing

Place the screen over the shaft of the motor and attach it to the motor housing using the 4 screws supplied. Do not overtighten these screws.

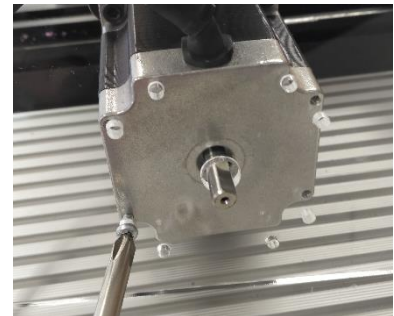

### Step 3 – Attach the hand wheel back onto the motor

Use the Allen key to re-attach the washer and hand wheel onto the shaft of the motor, leaving a small gap between the screen and the hand wheel.

