


Intermediate electrical and electronic principles

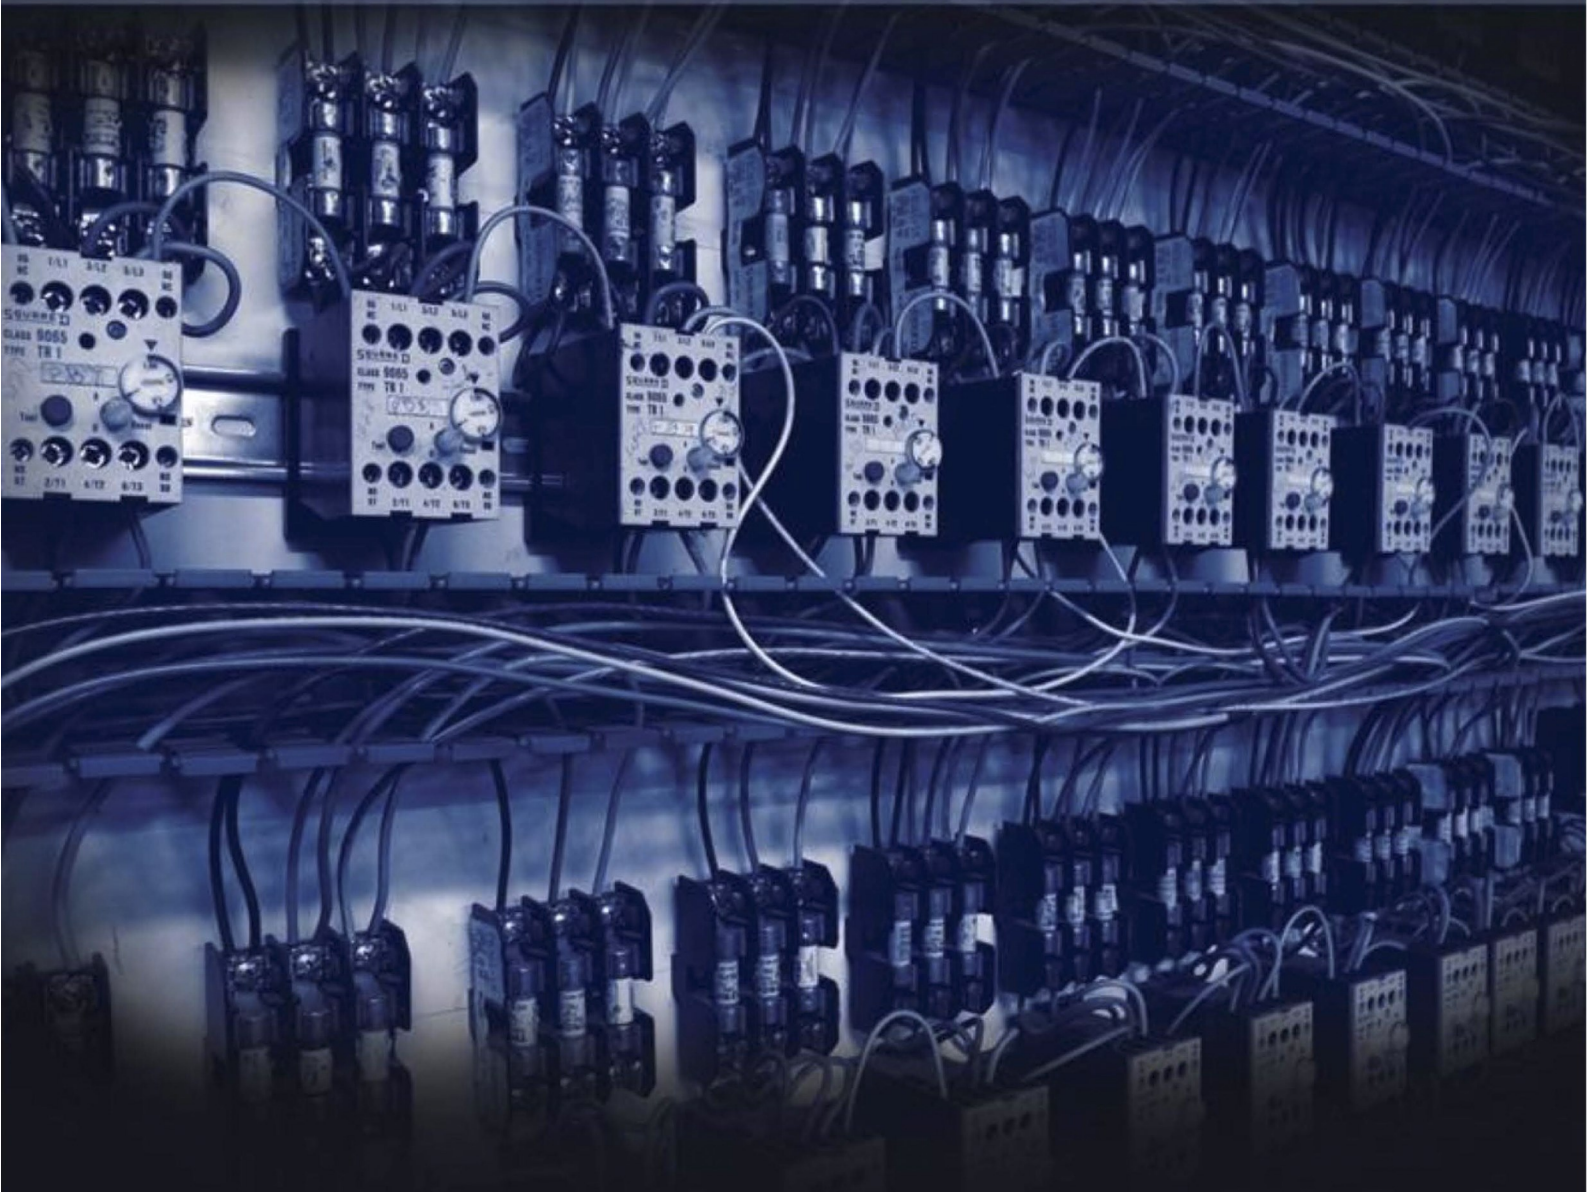

CP4583

Worksheet 1 - Cells and batteries	3
Worksheet 2 - Current measurement	5
Worksheet 3 - Voltage measurement	7
Worksheet 4 - Ohm's Law	9
Worksheet 5 - Series and parallel circuits	11
Worksheet 6 - Voltage dividers	13
Worksheet 7 - Current dividers	15
Worksheet 8 - Using Kirchhoff's Laws	17
Worksheet 9 - Superposition	19
Worksheet 10 - Thevenin's theorem	21
Worksheet 11 - Max power transfer	23
Worksheet 12 - Power in DC circuits	25
Worksheet 13 - Electrostatics and capacitors	27
Worksheet 14 - Capacitor charge and discharge	29
Worksheet 15 - Electromagnetism	31
Worksheet 16 - Inductors and inductance	33
Worksheet 17 - AC measurements	35
Worksheet 18 - AC and inductors	37
Worksheet 19 - AC and capacitors	39
Worksheet 20 - L-R series circuit	41
Worksheet 21 - C-R series circuit	43
Worksheet 22 - L-C-R series circuit	45
Worksheet 23 - L-R parallel circuit	47
Worksheet 24 - C-R parallel circuit	49
Worksheet 25 - Parallel L-C-R circuit	51
Worksheet 26 - Q factor	53
Worksheet 27 - Transformers	55
Worksheet 28 - Practical transformers	57
Worksheet 29 - Diode characteristics	59
Worksheet 30 - Half-wave rectifier	61
Worksheet 31 - Full-wave bridge rectifier	63

Worksheet 1

Cells and batteries

Many different types of battery are used to provide the power supplies in electrical and electronic equipment.

They can be categorized by materials used in them.

Types include **lead-acid**, **nickel-cadmium** (NiCad) and **nickel metal hydride** (NiMH).

Here are the e.m.f.'s of some single-cell batteries:

Alkaline (primary dry cell)	1.5V
Lead-acid (secondary cell)	2V
Nickel-cadmium (secondary cell)	1.2V
Nickel-metal hydride (secondary cell)	1.2V
Zinc-carbon (primary dry cell)	1.5V




The cells within them can be either **primary** (non-rechargeable) or **secondary** (rechargeable). In primary cells, the active constituents are used up at the end of the cell's life, whereas for secondary cells, the chemical reaction is reversible and the cell can be re-charged many times.

Batteries consist of a number of individual cells connected in series or in parallel. For example, a 24V lead-acid battery will usually have 12 cells (each with an e.m.f. of 2V) connected in series.


This first worksheet examines batteries and the cells within them.

Over to you:


- Set up each of the **series-connected battery** arrangements shown opposite. The diagram below shows one way of arranging the cells on the baseboard.
- For each, use a multimeter (set to the 20V DC range) to measure the output voltage.
- For the single-cell battery (a), measure the voltage, **E1**.
- For the two-cell battery (b), check that the voltage, $V = E1 + E2$
- For the three-cell battery (c), check that $V = E1 + E2 + E3$

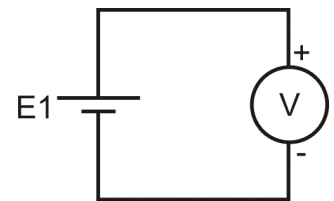


(a)

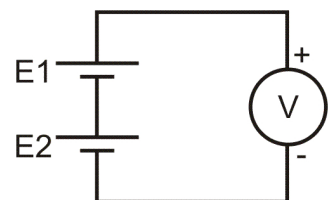

(b)

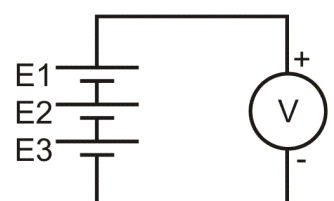

(c)

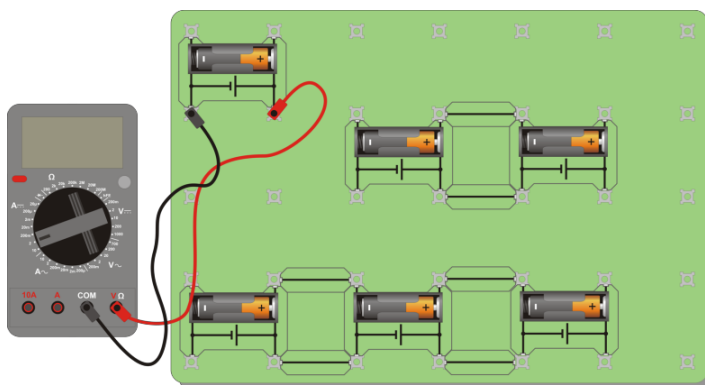


Worksheet 1


Cells and batteries

Over to you:


- Set up each of the **parallel-connected battery** arrangements shown opposite.
- For each use measure the output voltage.
- For the single-cell battery (a), measure voltage **E1**.
- For the two-cell battery (b), check that the voltage, $V = E1 = E2$.
- For (c), check that $V = E1 = E2 = E3$.

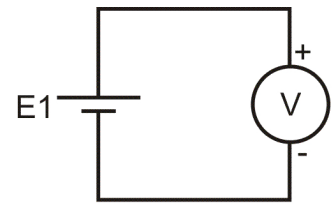

(a)

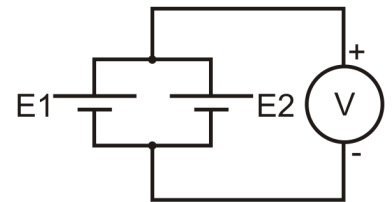

(b)

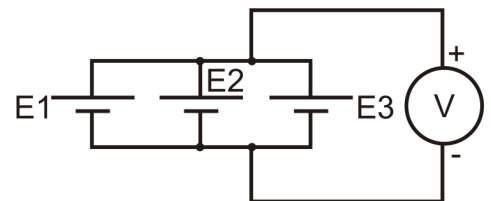

(c)

w1d

For your records:

- Summarise your findings for voltages in series-connected cells.
- Summarise your findings for voltages in parallel-connected cells.
- With a series-connected battery the *same* load current flows through each of the cells.
- With a parallel-connected battery the load current is *shared* between the cells.

Questions

1. How many nickel-cadmium cells are required in a series-connected 24V battery?
2. Two batteries are connected in parallel to supply 180A for an engine starter motor. How much current is supplied by each battery?
3. An emergency lamp uses eight 1.5V dry-cells connected in series. What voltage is applied to the lamp?
4. A 24V battery supplies 18 parallel-connected emergency lights. Each light requires 1.5A. What current is supplied by the battery?
5. Why should parallel connection of dissimilar types of batteries be avoided?

Answers are provided on page 70.

Worksheet 2

Current measurement



The symbols for three electrical meters are shown on the right. Ammeters measure current, voltmeters measure voltage (*potential difference*) and ohmmeters measure resistance.

They are often combined as a multimeter, which offers a convenient and cheap way to measure a range of electrical quantities. The photograph shows a typical multimeter.

It can measure both AC and DC quantities, and the symbols shown opposite distinguish between the two:

This worksheet shows you how to use a multimeter to measure the current flowing in a circuit.

Ammeter — —

Voltmeter — —


Ohmmeter — —

AC
 DC —

Over to you:

A. Series circuit:


- Set up the arrangement shown, using 12V 0.1A bulbs.
- Make sure that the power supply is set to 12V.
- This is a **series** circuit - There is only one route for the electric current to flow around the circuit.
- Measure the current flowing at point **P**.
To do this, plug the wires from the ammeter into the posts at the ends of the link at point **P**, and remove the link. This is shown in the picture.
- Record the result in the table.
- Now replace the link at **P**.
- Measure and record the current at point **Q** in the same way.
- Next, measure and record the current at points **R** and **S**.

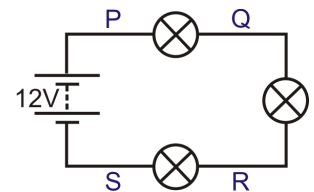

Position	P	Q	R	S
Current				

B. Parallel circuit:

- Set up the second circuit, again using 12V 0.1A bulbs.
- The power supply is still set to 12V.
- This is a **parallel** circuit - there are 'branches' in the circuit, and a number of ways for current to flow around it.
- Measure the current at the points shown in the circuit diagram and record them in the table given opposite, specifying A or mA:

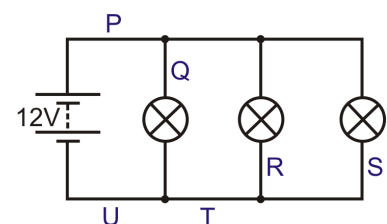

Position	P	Q	R	S	T	U
Current						


Worksheet 2

Current measurement



So what?

Using a multimeter to measure current:

- Plug one wire into the black COM socket.
- Plug another into the red mA socket.
- Select the 200mA DC range by turning the dial to the '200m' mark next to the 'A'  symbol.
- Break the circuit where you want to measure the current, by removing a link, and then plug the two wires in its place.
- Press the red ON/OFF switch when you are ready to take a reading.
- Change to a lower range if the reading allows it. (A '1' on the display means that the reading is too big for the chosen range.)

w3i

A possible problem!

The ammeter range is protected by a fuse located inside the body of the multimeter. This fuse may have 'blown', in which case the ammeter range will not work. Report any problems to your tutor so that the fuse can be checked.

A challenge:

The first circuit you built was a series circuit. The second was not.




See if you can spot a pattern for the behaviour of currents in each of the circuits!

For your records:

Use your findings to complete the following statements:

- In a series circuit, the current flows in all parts.
- In a parallel circuit, the currents in all the parallel branches add up to the current leaving the

Copy the circuit diagrams given below, and calculate the readings on ammeters A to H.

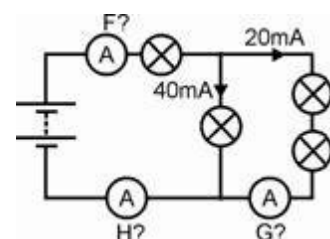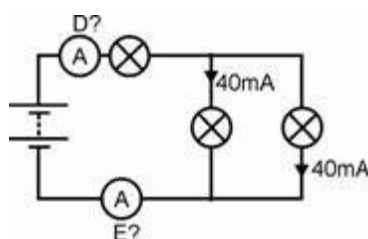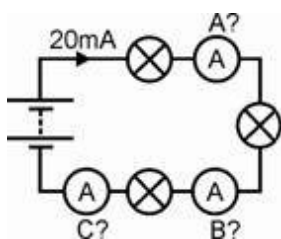

w2h

w2i

w2j

Worksheet 3

Voltage measurement



We can visualise electric current easily - it's the flow of tiny electrons . More precisely, electric current measures the number of electrons per second passing a particular point in the circuit.

It's more difficult to picture voltage, but you can think of it as the pressure that causes the current to flow.

Fortunately, it's easier to measure voltage than current. There's no need to break the circuit - just add the voltmeter in parallel with the component you are interested in!

*Ammeters are connected **in series** but voltmeters are connected **in parallel**!*


This worksheet shows you how to use a multimeter as a voltmeter.



Over to you:

A. Series circuit:


- Set up the arrangement shown, using 12V 0.1A bulbs, *but without the voltmeters.*
- Make sure that the power supply is set to 12V.
- This is a **series** circuit with only one route around it.
- Measure the voltage across the first bulb, shown as **P**.
To do this, plug the wires from the voltmeter into the posts at either end of the bulb. Don't remove any connecting links!
- Record the result in the table.
- Next, measure and record the voltage across the second bulb, **Q**, in the same way.
- Then measure and record the voltage across the bulb, **R**.

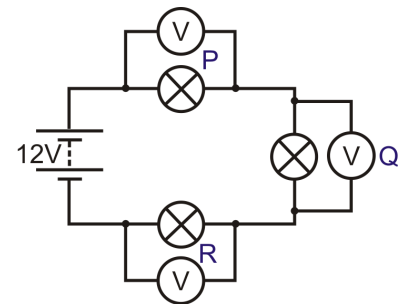

Position	P	Q	R
Voltage			

B. Parallel circuit:

- Set up the second circuit, again using 12V 0.1A bulbs.
- The power supply is still set to 12V.
- This is a **parallel** circuit - notice the 'branches' in the circuit.
- Measure the voltage at the points **P**, **Q** and **R** and record them in the table given opposite, specifying V or mV:

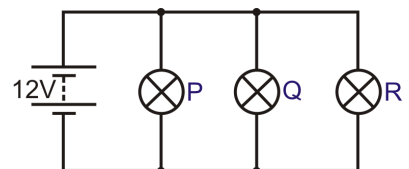

Position	P	Q	R
Voltage			


Worksheet 3

Voltage measurement

So what?

Using a multimeter to measure voltage:

A multimeter can measure both AC and DC quantities. The symbols were given on the last worksheet.




- Plug one wire into the black COM socket.
- Plug another into the red V socket.
- Select the 20V DC range by turning the dial to the '20' mark next to the 'V  ' symbol. (It is good practice to set the meter on a range that is much higher than the reading you are expecting. Then you can refine the measurement by choosing a lower range that suits the voltage you find.)
- Plug the two wires into the sockets at the ends of the component under investigation.
- Press the red ON/OFF switch when you are ready to take a reading.
- If you see a '-' sign in front of the reading, it means that the voltmeter leads are connected the wrong way round. Swap them over to correct this!

Two challenges:

- Looking at the results for the first circuit, add together the readings of the voltmeters at points P, Q and R. What do you notice about this total?
- Find a pattern in the results for the behaviour of the second circuit.

For your records:

- In a series circuit, the voltages across the components add up to the voltage across the
- In a parallel circuit, the components all have the voltage across them.
- Copy the following circuit diagrams, and calculate the voltages across bulbs A to E.

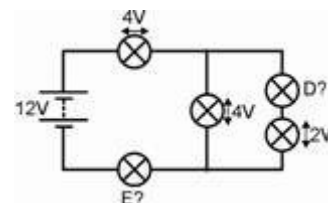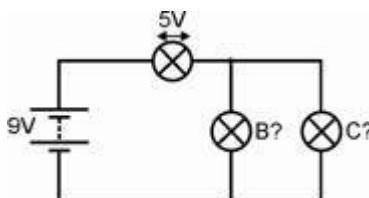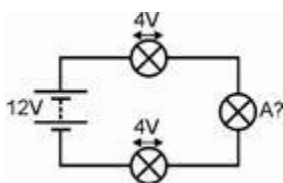

Worksheet 4

Ohm's Law

Current I - how many electrons pass per second.

Voltage V - a measure of how much energy the electrons gain or lose as they flow around a circuit.

Resistance R - how difficult it is for the electrons to pass through a material. In squeezing through, the electrons lose energy to the resistor, which warms up as a result.

The photograph shows Georg Simon Ohm - a significant figure in the study of electrical and electronic principles!




w4a


Ohm's law leads to a very important relationship in electricity: $V = I \times R$

Over to you:

- Build the circuit shown in the diagram.
- The picture shows one way to set this up.
- **Make sure that the power supply is set to 3V!**
- The variable resistor allows us to change the voltage across the 100Ω resistor.
- **Before you switch on**, select the **20mA DC** range on the ammeter, and the **20V DC** range on the voltmeter.
- Notice the positions of the red and black connecting wires. This ensures that the meters are connected the right way round to avoid '-' signs on the readings.
- Turn the knob on the variable resistor fully anticlockwise, to set the voltage supplied to a minimum.
- Turn the knob slowly clockwise until the voltage across the resistor reaches 0.1V. Then read the current flowing through the resistor.
- Turn the voltage up to 0.2V, and take the current reading again.
- Keep doing this until the voltage reaches 1.0V. (**Don't go past this or the resistor may overheat.**)
- Write your results in a table like the one opposite.

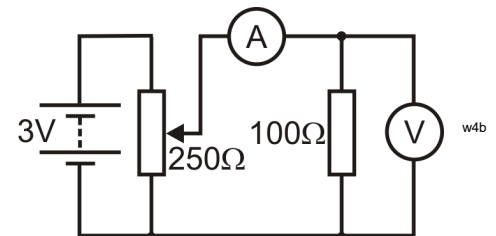

to ammeter

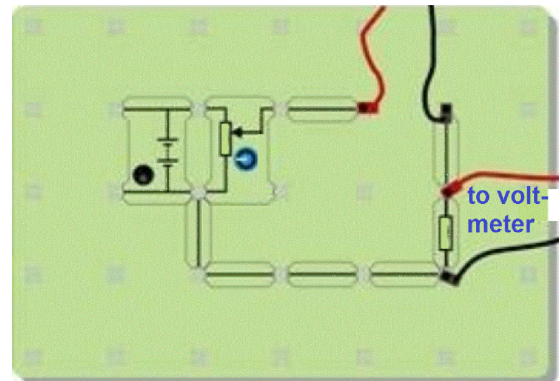

Resistor voltage	Resistor current
0.1V	
0.2V	
...	...
1.0V	

Worksheet 4

Ohm's Law



So what?


Using a multimeter to measure resistance:

You cannot measure resistance while the component is in the circuit. It must be removed first.

- Plug one wire into the black COM socket, and the other into the V Ω socket.
- Select the 200k Ω range, (or a range much higher than the reading you are expecting.)
- Plug wires into the two sockets at the ends of the component under investigation.
- Press the red ON/OFF switch when you are ready.
- Turn the dial to a lower range, until you find the reading.


A challenge:

- Plot a graph to show your results.
- Ohm's law predicts a straight line, so draw the best straight line through your points.
- If you know how, calculate the gradient of your graph. Ohm's law calls this quantity the **resistance** of the resistor.

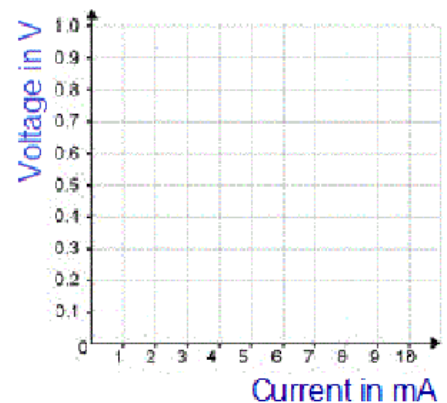

For your records:


- Ohm's law gives us the equations: $V = I \times R$ $R = V / I$ $I = V / R$
where **R** = resistance in ohms, **I** = current in amps and **V** = voltage.
(This also works with **R** in kilohms and **I** in milliamps, because the kilo and milli cancel out.)
- Copy the following diagrams, and calculate the missing quantities:

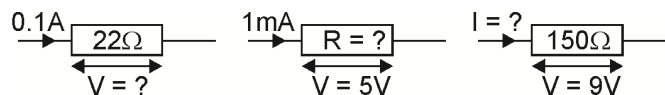

Resistor Colour Code:

Resistors come ringed with coloured bands to show the resistance value. Each colour represents a number, given in the table below.

Black	Brown	Red	Orange	Yellow	Green	Blue	Purple	Grey	White
0	1	2	3	4	5	6	7	8	9

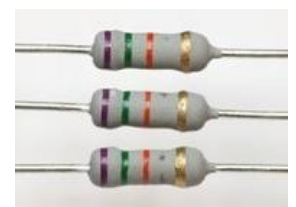

To read the colour code:

- start from the opposite end to the gold or silver band;
- write down the number shown by the first colour band;
- do the same for the second colour band;
- add the number of 0's shown in the next band (e.g. for red, add two 0's.)
- the final band gives the tolerance - how accurately it is made, (gold = 5%, silver = 10%.)

For the resistors in the photograph: Resistance = 7 (purple) 5 (green) 000 (orange) = 75000 Ω with a tolerance of 5%

Worksheet 5

Series and parallel circuits

In nearly all electrical circuits, some components are connected in series, while others are in parallel.

To apply the rules that you learned earlier, you have to recognise which parts of a circuit are in series and which are in parallel.

In a complex circuit, components in parallel have the *same voltage* across them, but may carry *different currents*, while components in series have the *same current* flowing through them, but may have *different voltages* across them.




w5a

Over to you:


- Connect a 270Ω resistor, a $1\text{k}\Omega$ resistor and a $2.2\text{k}\Omega$ resistor, as shown in the diagram. The 270Ω and $1\text{k}\Omega$ resistor are in series, while the $2.2\text{k}\Omega$ resistor is in parallel with the combination.

- Note: $2.2\text{k}\Omega$ and $2\text{k}2\Omega$ mean exactly the same thing, with the unit multiplier prefix replacing the decimal point.
- Use extra connecting links so that the current can be measured at points **A**, **B**, **C** and **D**. The photograph shows one way to do this.

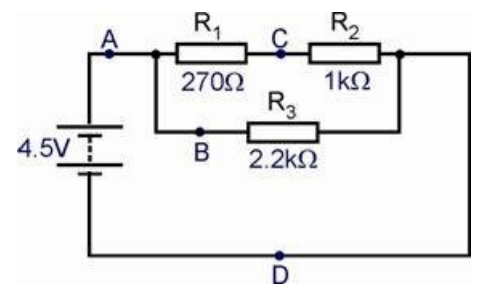

w5b

- Set the power supply to give a 4.5V output.
- Remove the connecting link at **A**, and connect a multimeter to read the current. Record it in the table.
- Remove the multimeter and replace link **A**.
- Remove the connecting link at **B**, and use a multimeter to measure the current here. Record it in the table.
- In the same way, measure and record the current at points **C**, and **D**.
- Connect the multimeter to read the voltage across resistor **R₁**. Record it in the table.
- Then connect the multimeter up to read the voltage across **R₂** and **R₃**, in turn, and record them in the table.

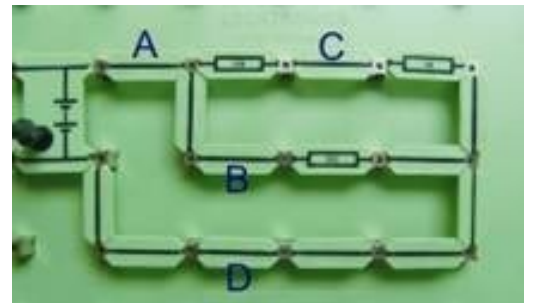

w5c

Power supply voltage	4.5V
Current at point A in mA	
Current at point B in mA	
Current at point C in mA	
Current at point D in mA	
Voltage across R ₁ (270Ω resistor)	
Voltage across R ₂ ($1\text{k}\Omega$ resistor)	
Voltage across R ₃ ($2.2\text{k}\Omega$ resistor)	

Worksheet 5

Series and parallel circuits

So what?

- The same current flows through R_1 and R_2 , as they are in series. This is the current you measured at point **C**.
- The current readings at **A** and **D** should be the same, as these measure the total current leaving and returning to the power supply.
- The current from the power supply splits, with part going through R_1 (and then R_2), while the rest flows through R_3 . In other words, adding together the readings at **B** and **C** should give a total equal to the reading at **A** (and **D**).
- The full power supply voltage appears across R_3 , but is split between R_1 and R_2 .
- Complete rows 1, 2 and 3 of the following table.


Power supply voltage	4.5V
Average of currents at A and D in mA (= I)	
Sum of currents at B and C in mA	
Sum of voltages across R_1 and R_2 (= V_S)	
Total resistance $R_T = V_S / I$	
Combined resistance of R_1 and R_2 (in series) (= R_C)	
Total resistance of all three resistors $R_T = R_C \times R_3 / R_C + R_3$	

- Complete the table by calculating the total resistance R_T of the three resistors by:
 - using I and V_S in the formula $R = V/I$;
 - adding together the resistance of R_1 and R_2 , as these are in series, to give R_C , their combined resistance, and then using $R_T = R_C \times R_3 / (R_C + R_3)$.
- Think of reasons why these two approaches might give different values for R_T . Which, do you think, gives the more reliable result?

Questions

For the circuit shown opposite, calculate:

1. The total resistance;
2. The current at **P**;
3. The voltage across R_3 , the $6k\Omega$ resistor;
4. The current at **R**;
5. The current at **Q**;
6. The voltage across R_1 , the $8k\Omega$ resistor.

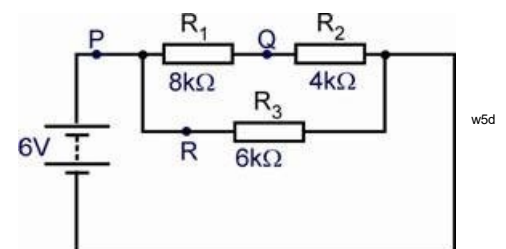

Answers are given on page 70.

Worksheet 6

Voltage dividers

Resistors are used to protect other components from excessive current.

They can also be used in voltage dividers to split the voltage from a power supply into smaller predictable portions. This is particularly useful when one of the resistors is a sensing component, such as a LDR (light-dependent resistor,) or a thermistor, (temperature-dependent resistor.)


Voltage dividers form the basis of many sensors. The output voltage can represent temperature, light-level, pressure, humidity, strain or other physical quantities.



w6a

Over to you:

- Connect two 10kΩ resistors in series, as shown in the circuit diagram.
- Set the power supply to give a 6V output.
- Remove the connecting link at **A**, and connect a multimeter, set on the 2mA DC range, to measure the current. Record the value in the table.
- Remove the multimeter and replace link **A**.
- Set up the multimeter to read DC voltages of about 5V, and connect it to read the voltage across resistor **R₁**, and then across **R₂**. Record these in the second column of the table.
- Next, set the power supply to 9V, and repeat the measurements. Record them in the third column of the table.

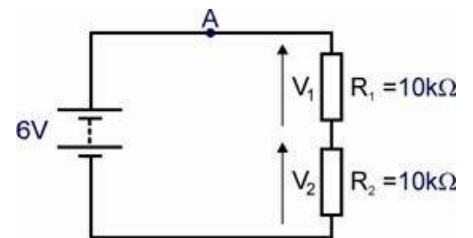

w6b

R₁ = 10kΩ, R₂ = 10kΩ		
Power supply voltage	6V	9V
Current at point A in mA		
Voltage V ₁ across R ₁		
Voltage V ₂ across R ₂		

- Now, swap resistor **R₁** for a 1kΩ resistor. Repeat the process and record the results in the second table.
- Finally, replace both resistors, with a 2.2kΩ resistor for **R₁**, and a 22kΩ resistor for **R₂**. Repeat the measurements and record them in the third table.

R₁ = 1kΩ, R₂ = 10kΩ	
Power supply voltage	9V
Current at point A in mA	
Voltage V ₁ across R ₁	
Voltage V ₂ across R ₂	

R₁ = 2.2kΩ, R₂ = 22kΩ	
Power supply voltage	9V
Current at point A in mA	
Voltage V ₁ across R ₁	
Voltage V ₂ across R ₂	

Worksheet 6

Voltage dividers



So what?

First of all, look at the theoretical behaviour of this circuit -

- Resistors R_1 and R_2 are connected in series. Their total resistance, is given by:

$$R_T = (R_1 + R_2).$$

- The full power supply voltage, V_S , appears across this total resistance, R_T , and so the current I , flowing through the two resistors is given by:

$$I = V_S / R_T$$

- The voltage across resistor R_1 is given by:

$$V_1 = I \times R_1$$

- The voltage across resistor R_2 is given by:

$$V_2 = I \times R_2$$

- Calculate R_T , I , V_1 and V_2 for each of the circuits looked at, and complete the next table with your results:

Circuit	R_T	I	V_1	V_2
$R_1 = 10k\Omega$, $R_2 = 10k\Omega$, $V_S = 6V$				
$R_1 = 10k\Omega$, $R_2 = 10k\Omega$, $V_S = 9V$				
$R_1 = 1k\Omega$, $R_2 = 10k\Omega$, $V_S = 9V$				
$R_1 = 2.2k\Omega$, $R_2 = 22k\Omega$, $V_S = 9V$				

- Compare the values of V_1 and V_2 with those you measured for each circuit. Why might you expect the experimental values to be different?

For your records:

- There is a straightforward way to view these results:
 - The voltage from the power supply is shared between the resistors, so that $V_1 + V_2 = V_S$.
 - The bigger the resistor, the bigger its share of the voltage.
- In the first circuit, $R_1 = R_2 = 10k\Omega$ so $V_1 = V_2 = V_S / 2$
- In the second and third circuits, $R_2 = 10 \times R_1$, and so $V_2 = 10 \times V_1$.
- The second and third circuits produce the same result, but the current is different.
- Sometimes it is best to use big resistor values, to reduce battery drain and power dissipation.
- However, using lower resistor values allows us to draw more current from the voltage divider circuit without really affecting voltages V_1 and V_2 .

Worksheet 7

Current dividers

Voltage dividers use resistors connected in **series** to split a voltage into calculable fractions.

Current dividers use resistors connected in **parallel** to set up known fractions of current.


Current dividers are used in ammeters. A known fraction of the total current passes through the meter and is measured. From that the total current is calculated.



w7a

Over to you:

- Connect two $10\text{k}\Omega$ resistors in parallel, as shown in the circuit diagram.
- Set the power supply to give a 6V output.
- Remove the connecting link at **A**. Connect a multimeter, on the 2mA DC range, to measure the current, I , at **A** (the total current leaving the power supply.) Record the value in the table.
- Remove the multimeter and replace link **A**.
- Measure the current at **B**, I_2 , in the same way, and record the result in the table.
- Set up the multimeter to read DC voltages of about 10V, and connect it across the power supply to read V_s . Record it in the table.
- Next, set the power supply (V_s) to 9V, and repeat the measurements. Record them in the table.

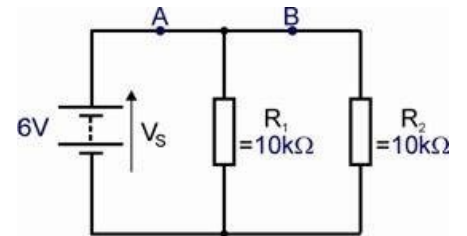

w7b

$R_1 = 10\text{k}\Omega$, $R_2 = 10\text{k}\Omega$		
Power supply voltage		
Current at point A, I , in mA		
Current at point B, I_2 , in mA		

- Lastly, swap resistor R_1 for a $1\text{k}\Omega$ resistor. Change the multimeter range to 10mA.
- Repeat the process, with the power supply still set to 9V, and record the results in a second table.

$R_1 = 1\text{k}\Omega$, $R_2 = 10\text{k}\Omega$		
Power supply voltage		
Current at point A, I , in mA		
Current at point B, I_2 , in mA		

Worksheet 7

Current dividers

So what?

First of all, the theoretical behaviour -

- The voltage across resistor $R_1 = V_S$, and so:


$$V_S = I_1 \times R_1$$

- Similarly, $V_S = I_2 \times R_2$

which means that:

$$I_1 \times R_1 = I_2 \times R_2$$

or:
$$I_1 = I_2 \times (R_2 / R_1)$$

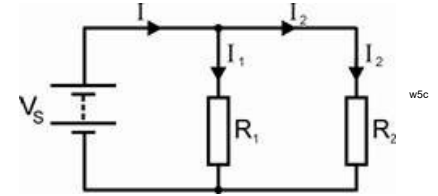

The current I from the power supply splits into I_1 and I_2 at the junction.

In other words:
$$I = I_1 + I_2$$

Using the equation for I_1 given above:
$$I = I_2 \times (R_2 / R_1) + I_2$$
$$= I_2 (1 + R_2 / R_1)$$

Re-arranging this gives
$$I_2 = I \times (R_1) / (R_1 + R_2)$$

This can be used to calculate the current I_2 flowing in the branch of the circuit.

- Use this formula to calculate I_2 in the three cases you looked at in your investigation. Write your results in the following table:

Circuit	I_2 in mA
$R_1 = 10\text{k}\Omega$, $R_2 = 10\text{k}\Omega$, Power supply set to 6V	
$R_1 = 10\text{k}\Omega$, $R_2 = 10\text{k}\Omega$, Power supply set to 9V	
$R_1 = 1\text{k}\Omega$, $R_2 = 10\text{k}\Omega$, Power supply set to 9V	

- Compare the calculated values of I_2 with those you measured for each circuit. Again, why might you expect the experimental value to be different to the theoretical one?

For your records:

- As with voltage dividers, there is a straightforward way to view these results:
 - The current from the power supply is shared between the resistors, so that
$$I = I_1 + I_2$$
 - The *bigger* the resistor, the *smaller* its share of the current.
- In the first and second circuits, $R_1 = R_2 = 10\text{k}\Omega$ so $I_1 = I_2 = I / 2$.
- In the third circuit, $R_2 = 10 \times R_1$, and so $I_1 = 10 \times I_2$.


Worksheet 8

Using Kirchhoff's Laws

- **Kirchhoff's Current Law** - 'What flows in must flow out'

The algebraic sum of all currents at any junction is zero.


In other words, $I_1 = I_2 + I_3$

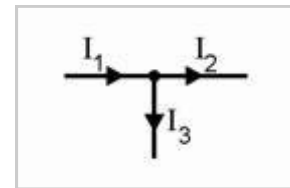

- **Kirchhoff's Voltage Law** -

Around any loop in the circuit, the algebraic sum of voltages is zero. The expression 'algebraic sum' simply means that we must take the direction of current flow into account.

There are three loops in the circuit you will investigate. These are shown in different colours in the diagram.

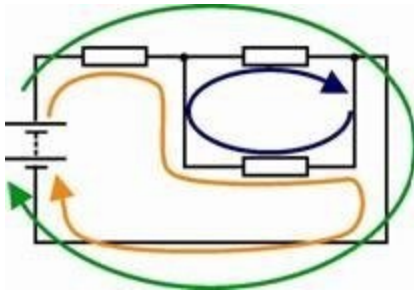


Over to you:

- Connect a 1kΩ, a 2.2kΩ and a 10kΩ resistor, as shown in the circuit diagram.

- Set the power supply to give a 9V output.

- Remove the connecting link at **P**.

Connect a multimeter, on the 20mA DC range, to measure the current at **P**, (the total current leaving the power supply,) and record it in the table.

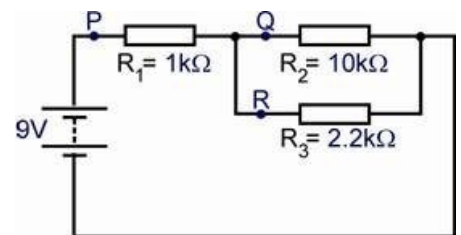

- Remove the multimeter and replace link **P**.

- Measure the current at **Q** and then **R** in the same way, and record the results in the table.

- Set up the multimeter to read DC voltages of about 10V, and use it to measure the voltages across the three resistors. Record them in the table.

Measurement	Value
Current at point P in mA	
Current at point Q in mA	
Current at point R in mA	
Voltage across R ₁	
Voltage across R ₂	
Voltage across R ₃	

- Next, we are going to analyse these results using Kirchhoff's Current and Voltage Laws.

Worksheet 8

Using Kirchhoff's Laws

So what?

- Kirchhoff's current law gives us the relationship:

$$I_1 = I_2 + I_3$$

- Now apply Kirchhoff's voltage law to each of the three loops.

The green loop: $9 = V_1 + V_2$ equation 1

The orange loop: $9 = V_1 + V_3$ equation 2

The blue loop: $0 = V_2 + V_3$

- Ohm's law gives us the relationships:

$$V_1 = I_1 \times R_1 = (I_2 + I_3) \times R_1$$

$$V_2 = I_2 \times R_2$$

$$V_3 = I_3 \times R_3$$

- Inserting the values of the resistors (in kΩ) gives:

$$V_1 = (I_2 + I_3) \times 1 = (I_2 + I_3)$$

$$V_2 = I_2 \times 10$$

$$V_3 = I_3 \times 2.2$$

- Using these, equation 1 becomes $9 = (I_2 + I_3) + (10 \times I_2)$

or $9 = 11I_2 + I_3$

which means that $I_3 = 9 - 11I_2$

and equation 2 becomes $9 = (I_2 + I_3) + (2.2 \times I_3)$

or $9 = I_2 + 3.2I_3$

Inserting the value of I_3 gives $9 = I_2 + 3.2(9 - 11I_2)$

so $(35.2 - 1)I_2 = 28.8 - 9$

which gives $I_2 = \mathbf{0.58 \text{ mA}}$

Substituting this in earlier equations $I_3 = 9 - 11I_2 = 9 - 11 \times 0.58 = \mathbf{2.63 \text{ mA}}$



and so $I_1 = 0.58 + 2.63 = \mathbf{3.21 \text{ mA}}$

In turn, these values give $V_1 = 3.21 \times 1 = 3.2 \text{ V}$

$$V_2 = 0.58 \times 10 = 5.8 \text{ V}$$

$$V_3 = 2.63 \times 2.2 = 5.8 \text{ V (not surprisingly!)}$$

- Check your measured values against these results!

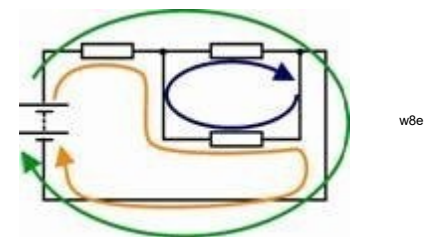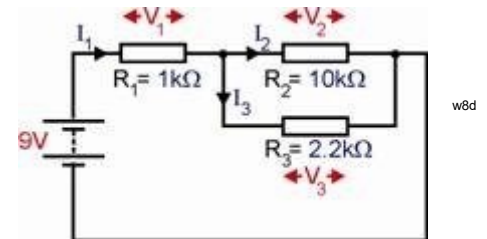

For your records:

- Kirchhoff's Current Law - 'What flows in must flow out'
The algebraic sum of all currents at any junction is zero.
- Kirchhoff's Voltage Law -
Around any loop in the circuit, the algebraic sum of voltages is zero.

Worksheet 9

Superposition


In this worksheet you are going to examine the effect of each power source separately. Then, the voltages and currents caused by the separate power supplies are “superimposed” to find the actual voltages and currents, in the circuit containing the multiple power sources. In practice, all these values would be calculated, but this investigation takes actual measurements to check that the approach works.

Over to you:

Build the circuit shown opposite, but *do not switch on any power supplies yet!*

In three separate stages, measure currents and voltages:

1. using only the 9V power supply;
2. using only the 6V power supply;
3. using both power supplies.

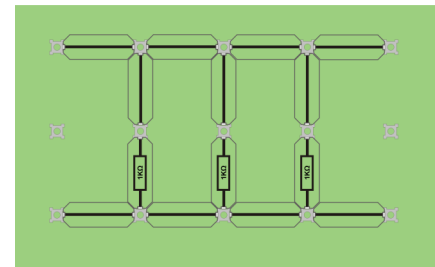

Step 1: Use only the 9V power supply

Replace the 6V power supply carrier with a connecting link.

Switch on the 9V power supply.

Use a multimeter, on the 2mA DC range, to measure the current at **A**, then at **B** and then at **C**, and record the values in the table. The directions of current flow have been added for you. Use a multimeter, on the 10V DC range to measure the voltage across the power supply, and then each resistor, and record the results in the table. The voltage directions (opposite to current flow, as current flows from a high voltage to a low voltage,) have been added for you.

Step 2: Use only the 6V power supply

Replace the 9V power supply carrier with a connecting link.

Return the 6V power supply and carrier, and switch on.

Repeat the measurements and record them in the table.

Add arrows to show the directions of currents and voltages.

Step 3: Use both power supplies

Reconnect both power supplies, and switch them on.

Measure the currents and voltages once more, recording the results in the table.

Add arrows to show the directions of currents and voltages.



Measurement	Step 1 - 9V supply		Step 2 - 6V supply only		Step 3 - Both power supplies	
	Value	Direction	Value	Direction	Value	Direction
Current at A = I_A		←				
Current at B = I_B		←				
Current at C = I_C		↓				
Voltage across power supply, V_S		↑			Not needed	
Voltage across 1kΩ resistor, V_1		←				
Voltage across 2.2kΩ resistor, V_2		→				
Voltage across 5.6kΩ resistor, V_5		→				
Voltage across 10kΩ resistor, V_{10}		↑				

Worksheet 9

Superposition

So what?

- For steps 1 and 2, Kirchhoff's voltage rule applies, so using the symbols defined in the table on the previous page,
$$V_1 + V_2 + V_{10} = V_S$$
and
$$V_1 + V_2 + V_5 = V_S$$
Kirchhoff's current rule still applies so $I_A = I_B + I_C$
- For step 3, these rules also apply but we have to take direction into account. The diagrams show the directions of current flow for the circuits used in the first two stages.

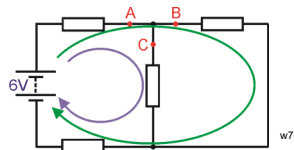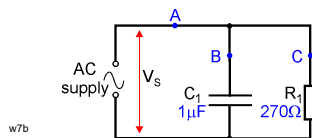

Step 1

Step 2

Notice that the current flows the same way through the 10kΩ resistor in both.

This means that when both power supplies are used:

- current at **C** = sum of separate currents due to the two power supplies
- voltage across the 10kΩ resistor = sum of separate voltages due to the two power supplies

In all other resistors, the current direction reverses between step 1 and step 2, so

current at **A** = **difference** between separate currents at **A** due to each power supply.

current at **B** = **difference** between separate currents at **B** due to each power supply.

V_1 = **difference** between separate V_1 voltages due to each power supply.

V_2 = **difference** between separate V_2 voltages due to each power supply.

V_5 = **difference** between separate V_5 voltages due to each power supply.

The direction of the current or voltage is the direction of the bigger component from step 1 or 2.

For example, here are a set of typical results:

$$\text{Step 1: } I_A = 0.87\text{mA} \leftarrow I_B = 1.16\text{mA} \leftarrow V_2 = 1.95\text{V} \rightarrow V_5 = 6.54\text{V} \rightarrow$$

$$\text{Step 2: } I_A = 0.93\text{mA} \rightarrow I_B = 0.59\text{mA} \rightarrow V_2 = 2.08\text{V} \leftarrow V_5 = 3.36\text{V} \leftarrow$$

When both power supplies are used:

$$I_A = 0.06\text{mA} \leftarrow I_B = 0.57\text{mA} \leftarrow V_2 = 0.13\text{V} \leftarrow V_5 = 3.18\text{V} \rightarrow$$

Look at the measurements you made. Check that the rules outlined above work for your results.



For your records:

To **calculate** the currents and voltages in a circuit that has more than one power source:

- replace all power sources but one with short-circuit links;
- calculate the currents and voltages caused by that remaining power source;
- do the same thing for each of the other power sources in turn;
- for each component, superimpose the currents and voltages from each separate power source (meaning that you must take into account the *direction* - add them when they are in the same direction - subtract smaller from bigger when they are in opposite directions.)

Worksheet 10


Using Thevenin's Theorem

Complex circuits, having large numbers of resistors and power sources, are difficult to analyse!

It may be possible to work out the combined resistance of parallel resistors, and then combine that with the total of series resistors to arrive at the total resistance of the circuit. Then that could be used to work out the total current leaving the power source. Further calculations could work out how much current flows through each component, and what the voltage across it is.

In some cases, this procedure is not possible, because the resistor connections are not straightforward. The classic example of this is the bridge network, shown in the diagram.

Thevenin's theorem offers a quick way forward in both of these cases. It states that any combination of voltage sources, current sources and resistors is electrically equivalent to a single voltage source in series with a single resistor.

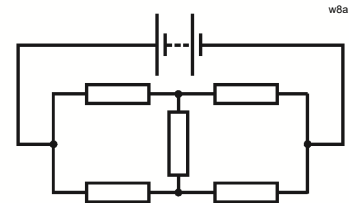

Over to you:

Connect two $10\text{k}\Omega$ resistors and a $15\text{k}\Omega$ resistor, as shown in the circuit diagram. Set the power supply to 6V .

Set up the multimeter to read DC voltages of about 10V , and use it to measure the output voltage V_{OUT} with nothing else connected to the output. This is known as the *open-circuit output voltage*, V_{OC} . Record it in the table.


Set the multimeter on the 10mA DC range, and connect it to the output terminals. As ammeters have zero resistance ideally, this short-circuits the output. The reading you get is called the *short-circuit current*, I_{SC} . Record the value in the table.

Connect the following resistors across the output, i.e. in parallel with the $15\text{k}\Omega$ resistor, in turn:

- a $10\text{k}\Omega$ resistor;
- a 270Ω resistor.

Each time, measure the output voltage, V_{OUT} , and the output current (the current at point A).

Record the results in the table.

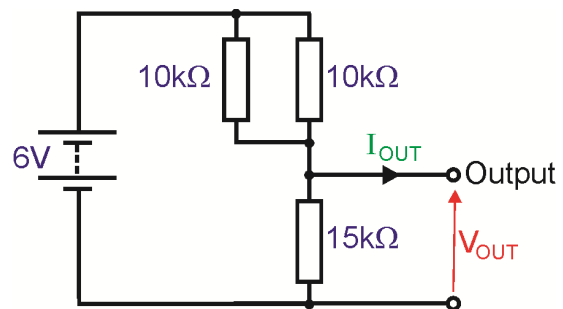

Load	Measurement	Value
None	Open-circuit output voltage V_{OUT}	
	Short-circuit current I_{SC}	
$10\text{k}\Omega$	Output voltage V_{OUT}	
	Output current I_{OUT}	
270Ω	Output voltage V_{OUT}	
	Output current I_{OUT}	

Worksheet 10

Using Thevenin's Theorem

So what?

Thevenin's theorem says that the circuit you built, circuit A, is electrically equivalent to circuit B.

In other words, if both were enclosed in black boxes, with only the output sockets accessible, then no experiment you could perform could tell the difference between them.

To see this, first you need to use the component values given in circuit A to calculate V_{OC} and R_{EQ} :

1. What is the combined resistance of R_1 and R_2 , i.e. two $10k\Omega$ resistors, connected in parallel?

Answer

2. This combined resistance and R_3 , the $15k\Omega$ resistor, form a voltage divider.

Calculate the output voltage, which is actually V_{OC} , for this voltage divider.

$V_{OC} = \dots\dots\dots$

3. If the output terminals were short-circuited, (connected together), this would remove the effect of the $15k\Omega$ resistor, leaving only the two $10k\Omega$ resistors to limit the output current. Calculate that current, i.e. the short-circuit output current, I_{SC} .

$I_{SC} = \dots\dots\dots$

4. The theorem says that you would get exactly the same values for V_{OC} and I_{SC} in circuit B. If you short-circuit the output of circuit B, then the full voltage, V_{OC} , from the voltage source appears across the equivalent resistor, R_{EQ} , and the current flowing through it would be I_{SC} . Ohm's law then gives the value of R_{EQ} as:

$$R_{EQ} = V_{OC} / I_{SC}$$

Calculate the equivalent resistance R_{EQ} .

$R_{EQ} = \dots\dots\dots$

5. Write your values for V_{OC} and R_{EQ} on the Thevenin equivalent circuit, shown opposite.

6. Use this circuit to calculate the output voltage, V_{OUT} , and output current, I_{OUT} , when the following load resistors are connected across the output:


- (a) $330k\Omega$ (b) $10k\Omega$ (c) 270Ω

Write your answers in the table.


Load	V_{OUT}	I_{OUT}
$10k\Omega$		
270Ω		

7. Check your measured values against these results!


Notice how much easier it was to calculate V_{OUT} and I_{OUT} in step 6, using the equivalent circuit, than using the procedure in steps 1 to 3. That's the merit of Thevenin's theorem!

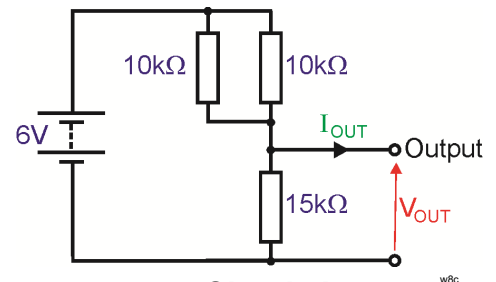

Circuit A

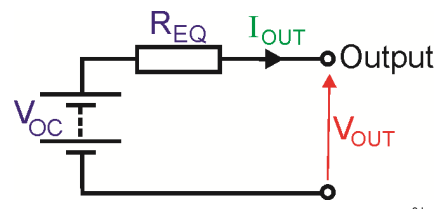

Circuit B

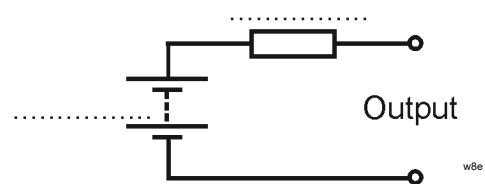

Worksheet 11

Maximum Power Transfer



iStock_000010162335Small.jpg


There are two common situations in electrical systems. Often we want one subsystem to pass on a voltage signal to a subsequent subsystem. This is called voltage transfer. Occasionally, we want to transfer electrical power from one subsystem to the next. This happens at the end of an audio system, for example, where we want the loudspeakers to receive as much power as possible from the preceding driver subsystem.

The maximum power transfer theorem states that the maximum amount of power will be transferred from one subsystem to the next when the input resistance of the final subsystem is equal to the Thevenin equivalent resistance of the preceding one.

Over to you:

Connect two $10\text{k}\Omega$ resistors and a $15\text{k}\Omega$ resistor, as shown in the circuit diagram.

Set the power supply to 6V .

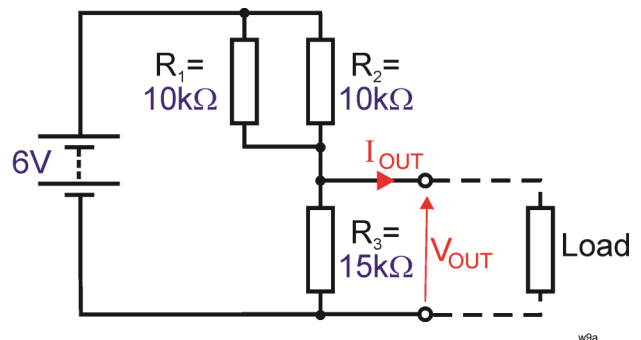

This is the same circuit you investigated in worksheet 8. There, you found that the Thevenin equivalent resistance of the circuit is $3.75\text{k}\Omega$.

Connect the first resistor listed in the table as a load for this circuit.

Use a multimeter, set to read DC voltages of about 10V , to measure the output voltage V_{OUT} .

Then set it on the 2mA DC range, measure the output current I_{OUT} .

Record your measurements in the table.

Repeat this procedure for each of the resistors in turn.

If you have one, set a variable resistor to a resistance of $3.75\text{k}\Omega$, (the equivalent resistance of the circuit,) and use it as the load. As before, measure the current through it and voltage across it.

Load Resistor	Output Voltage V_{OUT}	Output Current I_{OUT}
$1\text{k}\Omega$		
$2.2\text{k}\Omega$		
$5.6\text{k}\Omega$		
$10\text{k}\Omega$		
$22\text{k}\Omega$		
$3.75\text{k}\Omega$		

Worksheet 11

Maximum Power Transfer

So what?


- Power dissipated = current x voltage.

To dissipate a lot of power, both the current through the load and the voltage across it must be big. Look at your table of results. The voltage across the load is big when the load resistance is high. However, the current through the load is big when the load resistance is small!

- Use your measurements to calculate the power dissipated in the load, using $P = I_{OUT} \times V_{OUT}$ for each value of load resistor .
Complete the table with your results.

Load Resistor	Power Transferred $= I_{OUT} \times V_{OUT}$
1k Ω	
2.2k Ω	
5.6k Ω	
10k Ω	
22k Ω	
3.75k Ω	

- Plot a graph of your results, with 'Load' on the x-axis, and draw a smooth curve through your plotted points.

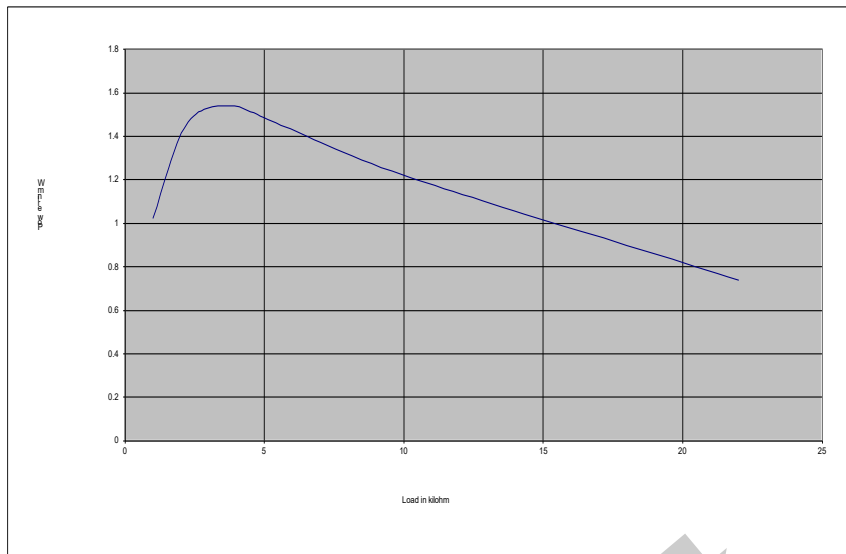

A graph of a typical set of results is shown here:

For your records:

Maximum power is transferred when the current through the load and the voltage across it are both big. However, the current is big when the load resistance is small, and the voltage across the load is big when the load resistance is big.

These conflicting requirements lead to:

Maximum power transfer theorem:

The maximum amount of power will be transferred from one subsystem to the next when the input resistance of the final subsystem is equal to the Thevenin equivalent resistance of the preceding one.

Worksheet 12

Power in DC circuits

Electrical power is vital to the operation of many complex systems. An aircraft, for example, would not be able to fly without electricity.

The ability to generate and make efficient use of electrical power is central in the modern world. As a result, you need a sound grasp of electrical power and energy conversion.




This worksheet provides a useful introduction to this topic.



Over to you:

- Set up each circuit in turn .
- For each bulb, measure:
 - the current through it,
 - the voltage across it.

(First, decide where to connect the ammeter and voltmeter!)

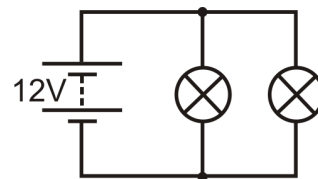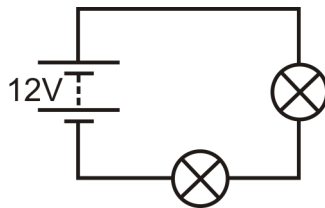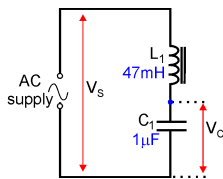

A few relationships that you need to know:

A reminder:

Electric current is a measure of how many electrons are passing per second.

Voltage is a measure of the energy the electrons gain or lose on passing through a component.

Fact 1: **Number of coulombs $Q = \text{Current } I \times \text{time } t$**

(Common sense - current measures how many electrons pass per second, so to find out how many have passed in 10 seconds, for example, you simply multiply the current by 10!)

Fact 2: **One volt means one joule of energy given to or lost by one coulomb of charge.**

(A 12V battery gives each coulomb of charge that passes through it 12J of energy. If the voltage dropped across a resistor is 2V, every coulomb that passes through it loses 2J of energy (i.e. converts 2J to heat energy. It's the electrons struggling to squeeze past the atoms in the resistor - it makes them hot!)

Fact 3: **Power is the rate at which energy is converted.**

(So - a power rating of one watt means that one joule of energy is converted from one form to another every second. The old style of domestic light bulbs had power ratings of about 60W. Newer energy-saving types have a rating of 15W for the same brightness, because they waste less electrical energy as heat!)

Worksheet 12

Power in DC circuits



So what?

Formula juggling - ignore all but the result if you wish:

$$\begin{array}{llll} P = E / t & \text{from fact 3} & \text{and } E = Q \times V & \text{from fact 2} & \text{so } P = Q \times V / t \\ \text{but } Q = I \times t & \text{from fact 1} & \text{so } & P = I \times t \times V / t & \\ \text{or, cancelling out the 't'} & & \text{Result} & \mathbf{P = I \times V} & \end{array}$$

The cast:

P = power in watts E = energy converted in joules Q = charge in coulombs
 I = current in amps V = voltage dropped in volts! t = time energy conversion took in seconds

• Use your results to answer the following:

- Calculate:
 - the power dissipated in each bulb (using the formula $P = I \times V$)
 - how long it takes each bulb to take 1J of energy from the electrons;
 - how much energy (in joules) the power supply is losing each second.
- Each of the three circuits that you investigated transferred energy at different rates. The amount of energy transferred depends not only on the number of lamps but also on the way they are connected. Think about the energy dissipated in each of the three circuits. Which circuit transfers the least energy and which the most in a given time? Explain to your colleague why this is.
- Which battery will 'go flat' first?
Explain your answer in terms of the amount of energy converted.

For your records:

- Power is the rate at which energy is being used.
- When a component has a voltage V across it, and a current I flowing through it, it is converting energy from one form to another at a rate given by the power formula

$$P = I \times V.$$

Questions:

1. A DC power unit supplies 28V to two parallel loads, each rated at 288W, for 10 minutes. What current is supplied to each load?
What energy is supplied by the power unit in that 10 minutes?
2. The battery in an emergency radio beacon can supply 480kJ of energy. The battery is rated at 12V 1A. For how many hours will the beacon operate?

Answers are provided on page 70.

Worksheet 13

Electrostatics and capacitors

Static electricity can be produced by friction (for example, rubbing a balloon on a woollen sweater).

Bodies charged by this method have either positive or negative polarity, depending on whether a deficit or excess of charge-carrying electrons is present.

Bodies can remain in this state for some time. Stray static charge like this cause electrical noise and interference to avionic and communications equipment . Special measures, such as static discharging wicks - are used to avoid the build-up of charge on aircraft.




w10a

Capacitors, extremely useful electrical components, provide us with a means of accumulating and storing electric charge. A simple capacitor consists of two metal plates separated by an insulating dielectric, such as polyester film. The charge present is the product of the capacitance of the capacitor (in Farad) and the applied voltage (in Volt). In other words $Q = C \times V$ coulomb.

Over to you (optional investigation):

- Make your own capacitor with a square of thin card between two square aluminium plates. Keep it clamped together by placing it between heavy glass plates with a heavy object on top.
- Measure the capacitance of your capacitor using a digital multimeter switched to the 2nF range.
- Increase the separation of the plates by adding extra pieces of card (up to six).
- Each time, measure and record the capacitance.

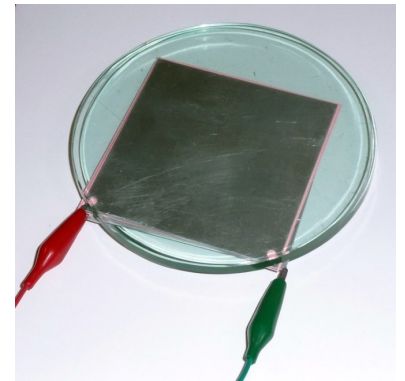

w10b

Thickness of card	1	2	3	4	5	6
C in nF						

- Next change the amount by which the plates overlap (whilst keeping the plates parallel). Mark lines on the capacitor at 75%, 50%, 37.5%, 25% and 12.5% of the surface and for each overlap, measure and record the capacitance in the table.

Area of overlap	100% (A)	75% ($3A/4$)	50% ($A/2$)	37.5% ($3A/8$)	25% ($A/4$)	12.5% ($A/8$)
C in nF						

Worksheet 13

Electrostatics and capacitors



So what?

Use your results to:

- Plot a graph showing how the capacitance changes with plate separation.
- Plot a graph showing how capacitance changes with the overlapping area of the plates.
- What conclusions can you draw from the first graph?
- What conclusions can you draw from the second graph?

For your records:

- Increasing the separation of the plates reduces the capacitance.
More precisely, capacitance is inversely proportional to the plate separation.
- Increasing the overlap of the plates increases the capacitance.
More precisely, capacitance is directly proportional to the plate area.
- Combining these results we can arrive at the important relationship:

$$C \propto \frac{A}{d} = k \frac{A}{d} = \frac{\epsilon_0 \epsilon_r A}{d}$$

where:

C = capacitance;

A = plate area;

d = plate separation;

ϵ_0 = permittivity of free space;

ϵ_r = relative permittivity of the dielectric material (insulator).


Worksheet 14

Capacitor charge and discharge

Capacitors provide a means of storing electric charge, acting as a reservoir for electrical energy. Charge can be transferred to a capacitor by connecting it to a power supply or a battery.

When the capacitor discharges, the stored energy is released, usually as heat. Later, the capacitor can be recharged. The stored energy is then replenished.

In this worksheet, you investigate capacitor charge and discharge.

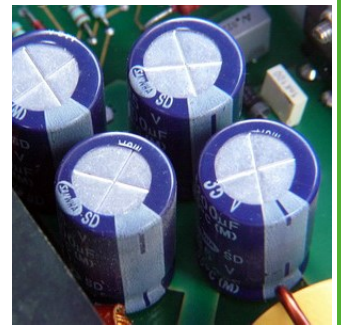


w11a

Over to you:

Charging a capacitor:

- Build the circuit shown opposite, using values $R = 10\text{k}\Omega$ and $C = 1,000\mu\text{F}$.
- Make sure that the DC power supply is set to 9V.
- Use a multimeter, on the 20V DC scale to measure the voltage across the capacitor.
- Press and hold down switch S to discharge the capacitor fully.
- Release S so that the capacitor begins to charge, and measure and record the capacitor voltage every 10 seconds.
- Repeat this process using values of $C = 2,200\mu\text{F}$ and $R = 10\text{k}\Omega$, and then $C = 1,000\mu\text{F}$ with $R = 22\text{k}\Omega$. You now have three sets of readings, set out in three tables like the one below:

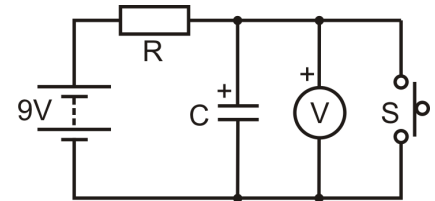


w11b

R = k Ω , C = μF													
Time in s	0	10	20	30	40	50	60	70	80	90	100	110	120
Capacitor voltage in V													

Discharging a capacitor:

- Build the circuit shown opposite, with $R = 10\text{k}\Omega$ and $C = 1,000\mu\text{F}$.
- Again, make sure that the power supply is set to 9V DC and that the multimeter is on the 20V DC range.
- Press and hold down switch S to charge the capacitor fully. The charge will build up rapidly as there is no resistance to limit the charging current.
- Release S so that the capacitor begins to discharge and record the voltage every 10 seconds in a table like the one above.
- Repeat the same process for values of $C = 2,200\mu\text{F}$ and $R = 10\text{k}\Omega$, and then $C = 1,000\mu\text{F}$ with $R = 22\text{k}\Omega$. You should once again have three sets of readings set out in three tables.

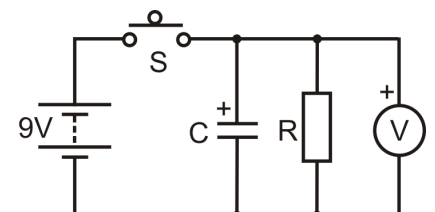


w11c

Worksheet 14

Capacitor charge and discharge

So what?

- Use your results to:
 - plot three graphs showing how the capacitors charge, when connected to series resistors, (over the period from 0 to 120s.)
 - plot three graphs showing the discharge of capacitors through 'shunt' resistors, (again over the period from 0 to 120s.)
- The diagrams show typical shapes for these graphs. Guided by your experimental points, draw smooth curves for each graph.

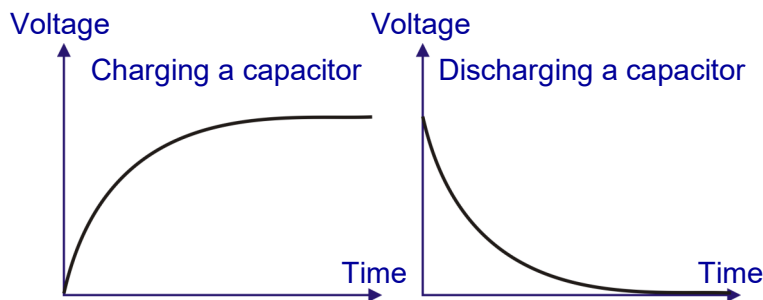

w11d

- Take a close look at your graphs. Does the capacitor ever completely charge or discharge?
- What effect do the values chosen for C and R have on the rate at which the capacitor charges or discharges?
- For each charging graph, find the time it takes for the capacitor voltage to reach 63% of its final value. Compare this with the corresponding time constant ($= R \times C$, where R is in $M\Omega$ and C in μF .)
- For each discharging graph, find the time it takes for the capacitor voltage to fall to 37% of its initial value. Once again, compare this time value with the corresponding time constant).
- The charge and discharge curves show **exponential growth** and **exponential decay** respectively. Find out as much as you can about the exponential constant, e.

For your records:

- A capacitor charges faster initially, as a larger charging current flows, and then the rate of charging slows down. The shape of the charging curve is an example of exponential growth.
- When a capacitor discharges, the voltage across it falls rapidly to begin with, and then falls more slowly. This is an example of exponential decay.
- The rate of change of voltage for both charge and discharge is governed by the time constant for the R-C network. The time constant **T** is calculated using the formula:

$$T = R \times C$$

and it has units of seconds if **R** is in Ω and **C** in F,
or if **R** is in $M\Omega$ when **C** is in μF .


Worksheet 15

Electromagnetism



Many electrical components, such as the generator shown here, are based on the application of electromagnetism.

To generate an emf, you need a magnetic field, a wire conductor and some relative movement as you will see from this investigation.

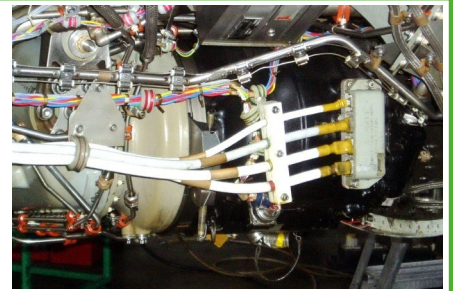


w12a

Over to you:

- Set up the arrangement shown in the diagram.
- The amount of electricity generated will be tiny. We can observe it using:

- the Locktronics milli-ammeter module, (*though this may not give good results*)
- a multimeter, connected to points **X** and **Y**;
- an oscilloscope, connected to points **X** and **Y**. (as shown)

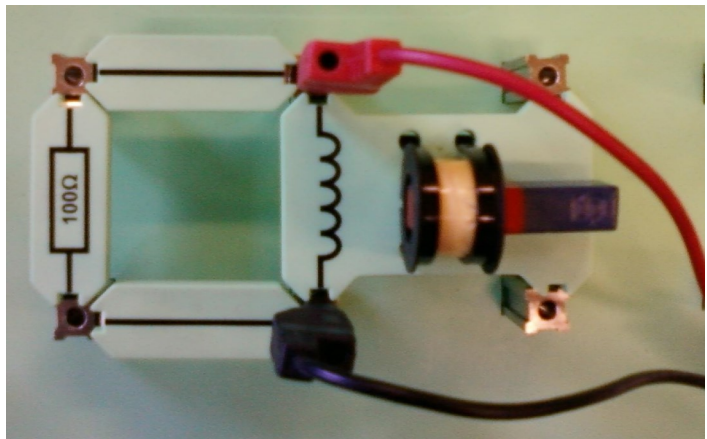

- If using the multimeter, set it to its most sensitive DC current scale, you may need several attempts to see convincing results.

- For the oscilloscope, suitable settings are given at the bottom of the page.
- Move the magnet into the coil as fast as you can and watch what happens to the output.
- Next reverse the direction of motion, and pull the magnet out, watching what happens.
- Investigate the effect of speed of movement on the emf produced.

w12c

Typical oscilloscope settings:

Timebase 1s/div (X multiplier x1)

Voltage range Input A $\pm 200\text{mV DC}$ (Y multiplier x1)

Input B Off

Trigger mode Auto **Trigger channel** Ch.A

Trigger direction Rising **Trigger threshold** 10mV


Worksheet 15

Electromagnetism

So what?

From the results, the generated current and voltage have:

- a **magnitude** that depends on the speed of movement;
- a **polarity** that depends on the direction of motion.

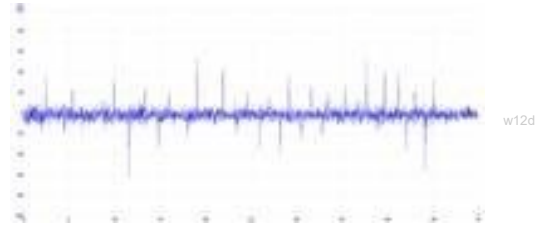


Typical results for the oscilloscope are shown here. Inserting the magnet generates a pulse of current in one direction, and withdrawing it produces a pulse of opposite polarity. (Experiment with other time base settings to try to get better results.)

Here's the underlying physics:

- When the wire moves at right-angles to the magnetic field, the electrons move with it.
- Whenever electrons move, they generate a magnetic field.
- This interacts with the field of the magnet, exerting a force on the electrons at right-angles to the direction of motion and to the magnetic field.
- This force pushes electrons along the wire, generating a voltage and a current if there is an electrical circuit.
- Using a coil of wire increases the size of voltage and current generated because each wire turn in it is moving inside the magnetic field, and so has electricity generated in it. The effects of all the turns add together, increasing the amount of electricity generated.

Fleming's Right-hand Rule:

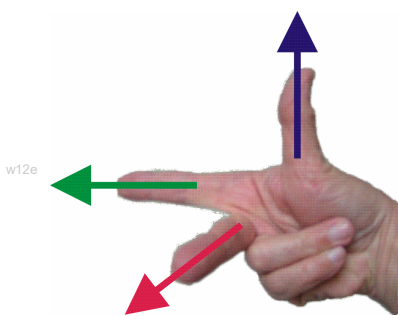

Fleming devised a painful way of predicting the direction of the generated current .

Use your **right**-hand to produce the gesture shown in the picture. Fore finger, centre finger and thumb are all at right-angles to each other!

When the **F**ore finger points in the direction of the magnetic **F**ield (from North pole to South pole,) and the **th**u**M**b points in the direction of the **M**otion, the **C**entre finger points in the direction of the resulting **C**urrent. This is also known as the *dynamo rule*.

Optional extension:

If you have other coils available, and other magnets, you could show that the magnitude also depends on the number of turns of wire in the coil and the strength of the magnetic field.

For your records:


Use the results of the investigation to answer the following questions:

- What factors determine the emf generated?
- How can you predict the polarity of the emf generated?

Worksheet 16

Inductors and inductance

A current flowing in a conductor creates a magnetic field in the space around it. This can be intensified by winding the conductor into a coil and then inserting a core of a material such as iron, steel or ferrite, a ceramic material containing iron oxide.

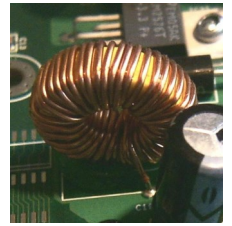


w13a

When a changing current passes through an inductor, an induced emf appears across its terminals. This opposes the change that created it, which explains why larger inductors are often referred to as **chokes**.

Inductors are used in many applications, from filters to fluorescent lighting and ignition units.

Over to you:

- Build the circuit shown.

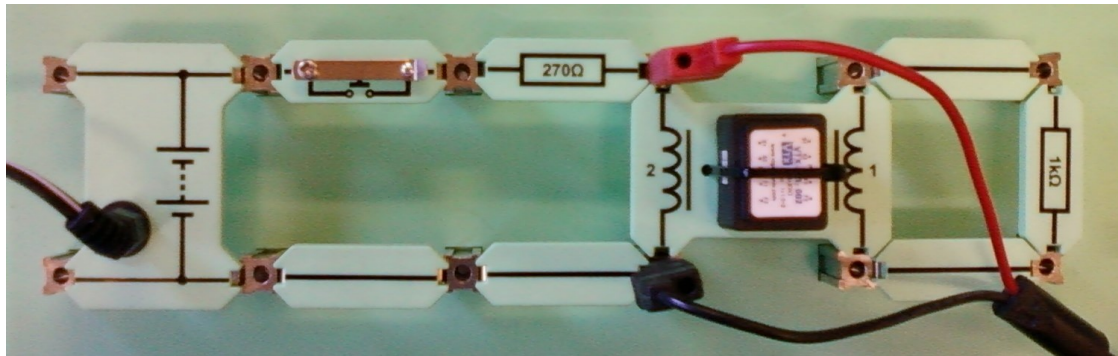

w13b

The push-to-make switch, S is connected in series with R, a current-limiting resistor. The inductor, L is the primary of the 2:1 transformer.

- Set the power supply to 12V DC.
- Connect an oscilloscope to display the voltage drop across the inductor. Make sure the leads are connected with the polarity shown on the diagram. Typical settings for the oscilloscope are given in the next section.
- Switch on the DC power supply and then press, and hold the switch closed so that current flows through the inductor.
- Keep the switch closed for a few seconds then release it and observe the result on the oscilloscope . You should see a sudden, very large negative voltage spike.
- You may have to repeat this step several times to obtain a satisfactory display

Typical oscilloscope settings:

Timebase 1 ms/div (X multiplier x1)
Voltage range Input A ±20 V DC (Y multiplier x1) Input B Off
Trigger mode Normal **Trigger channel** Ch.A
Trigger direction Falling **Trigger threshold** 1000 mV


Worksheet 16

Inductors and inductance

So what?

The trace shows a typical display produced when the switch is released.

It shows the large negative spike generated as the magnetic field in the inductor suddenly collapses, when the current is interrupted.

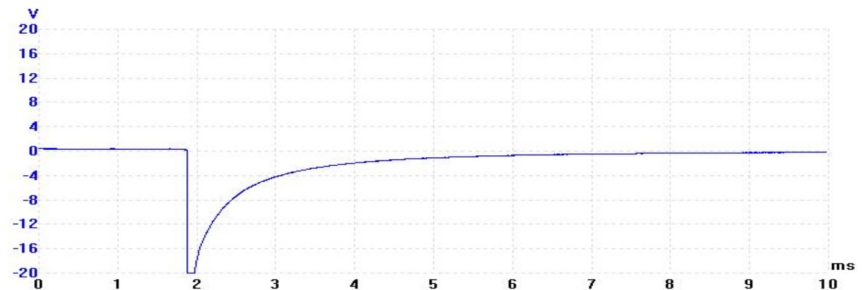

Here's the physics:

- When the switch is closed, a steady current flows in the inductor and produces a steady magnetic field in its core.
- When the current is interrupted by opening the switch, the magnetic field collapses rapidly because there's nothing to maintain it.
- When the field collapses through the turns of the inductor coil, a voltage is generated across the terminals of the inductor. This can be many times greater than the supply voltage.
- The induced voltage is negative. In other words it opposes the original direction of current flow, and as a result it is called a *back emf*.
- A large back emf. can cause considerable damage such as arcing at switch or relay contacts and destruction of low-voltage electronic components.

For your records:

Back emf:

- appears whenever current is suddenly removed from an inductor.
 - opposes the original current flow.
 - can be very large and many times greater than the supply voltage.
- We often take precautions to limit the back emf generated when an inductive component (such as a relay coil) is switched on and off.

Later, you see that this can be achieved easily using a diode, connected with reverse bias, in parallel with the inductive component.

Worksheet 17

AC measurements



w14a




The ability to make accurate measurements of alternating current and voltage is an important skill. In reality, AC measurements are not quite so easy to make as DC.

First of all, here's a brief introduction to some of the quantities and terminology that you will need to get to grips with:

AC voltage and current

When measuring alternating voltage and current, we usually use *root-mean-square* (RMS) values. These are the effective value of an alternating current. They are the DC equivalents that would produce the same heating effect if applied to a resistor.

It is sometimes useful to use the *peak* or *peak-to-peak* value of an AC waveform as they are easy to measure using an oscilloscope (see the picture).

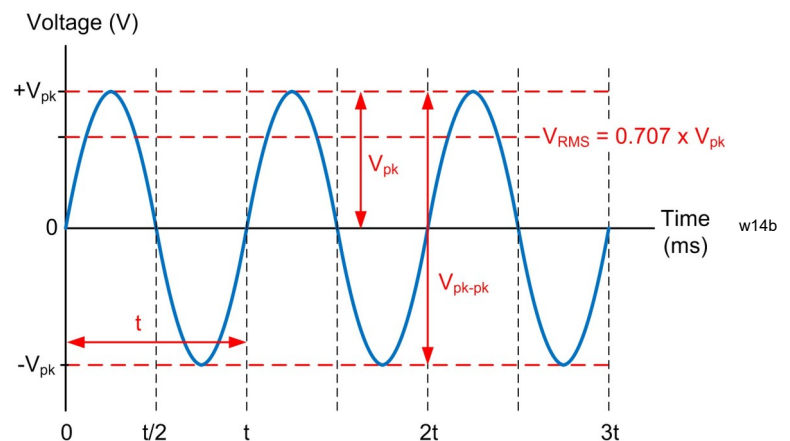

w14b

Frequency

The frequency of a repetitive waveform is the number of cycles of the waveform which occur in one second. Frequency is expressed in hertz, (Hz), and a frequency of 1Hz is equivalent to one cycle per second. Hence, a signal frequency of 400Hz means that 400 cycles of it occur every second.

Periodic time

The periodic time (or period) of a signal is the time taken for one complete cycle of the wave. The relationship between periodic time, t , (in s) and frequency, f , (in Hz) is:


$$T = 1 / f \text{ or } f = 1 / T$$

For example, the periodic time of a 400Hz AC signal is 2.5ms.

Waveforms

Waveforms show us how voltage or current signals vary with time. Common types of waveform include sine (or sinusoidal), square, triangle, ramp (which may be either positive or negative going), and pulse. In this module we are concerned only with the most basic of waveforms, the sine wave.

Waveforms are viewed and measured using an oscilloscope, either a conventional type like the one shown in the picture or a virtual instrument (like Picoscope).

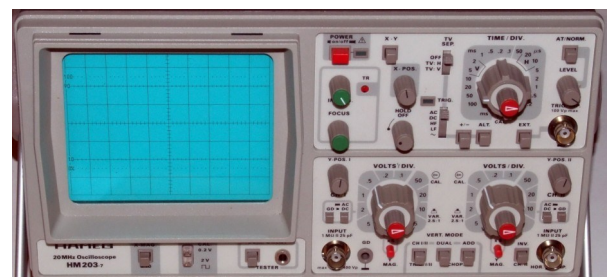

Worksheet 17

AC measurements



Over to you:

- Connect an oscilloscope to display the output of an audio frequency signal generator. (Typical oscilloscope settings are given at the bottom of the page.)
- Adjust the signal generator to produce a sine wave output at 100Hz. and set the amplitude of the signal so that the display on the oscilloscope is exactly 2V peak-peak.

- Sketch the oscilloscope display on the graph paper and make sure that you label the voltage and time axes.
- Use the X-axis time scale on the oscilloscope to measure accurately the time for one complete cycle (i.e. the periodic time). Show this in the table.
- Set the signal generator to 200Hz, 400Hz, 600Hz, 800Hz and finally 1,000Hz and at each frequency measure and record the period time in the table.

- Use the data in the table to plot a graph of periodic time against frequency.

Use this to verify the relationship $f = 1/T$.

Frequency (Hz)	Periodic time (ms)
100	
200	
400	
600	
800	
1000	

For your records:

- Write a short description of the following AC terms:
 - amplitude;
 - frequency;
 - period.
- The rms (root-mean-square) value of a sinusoidal AC signal gives the equivalent DC voltage which has the same effect. To replace an AC power source, which has a rms voltage of 12V, you could use a 12V DC source instead.

- The rms and peak values of a sinusoidal AC signal are related by the relationship:

$$\text{Peak value} = \text{rms value} \times \sqrt{2}$$

Typical oscilloscope settings:

Timebase - 1ms/div (X multiplier x1)

Voltage range - Input A - $\pm 5V$ DC (Y multiplier x1) Input B - Off

Trigger Mode - Auto **Trigger Channel** - Ch.A

Trigger Direction - Rising **Trigger Threshold** - 10mV

Worksheet 18

AC and inductors

w15a




Resistors oppose electric currents. Inductors oppose *changes* to electric currents, but the mechanism is different. An electric current flowing in the inductor, sets up a magnetic field. Increasing the current increases the magnetic field, and that takes energy from the current, opposing the increase. Reducing the current reduces the magnetic field, and that releases energy, which tries to maintain the current.

Inductors behave rather like flywheels on a rotating shaft. Their angular momentum tries to keep the shaft rotating at the same speed. When the shaft starts to slow down, the energy stored in the flywheel tries to keep it going. When the shaft tries to speed up, the flywheel requires energy to speed it up, and so the flywheel seems to resist the change.

Over to you:

- Connect a 47mH inductor in series with a signal generator, as shown in the circuit diagram.
- Use enough connecting links so that the current can be measured at point **A**. The photograph shows one way to do this.
- Set the signal generator to the maximum output (5V_{pp}) AC voltage at a frequency of 50Hz.
- Remove the connecting link at **A**, and connect a multimeter, set to read up to 20mA **AC**, in its place.
- In the table, record the current flowing at point **A**.
- Remove the multimeter and replace link **A**.
- Set up the multimeter to read **AC** voltages of up to 20V and connect it in parallel with the inductor.
- Record the voltage in the table.
- Now change the signal generator frequency to 100Hz and repeat the measurements. Record them in the table.
- Do the same for frequencies of 500Hz and 1kHz (1,000Hz). Again, record the measurements in the table.

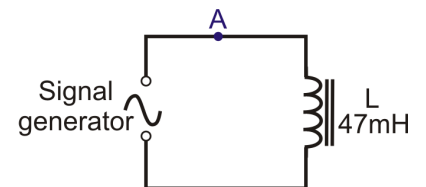

w15b



w15c

Frequency	Current I	Voltage V
50 Hz		
100 Hz		
500 Hz		
1 kHz		

Worksheet 18

AC and inductors



So what?

- Resistors behave in a linear way. From Ohm's Law we know that if you double the current through the resistor, you double the voltage dropped across it, and so on. The ratio of voltage to current is called resistance.
- Inductors are more complicated. If you double the *rate of change* of current through the inductor, you double the voltage dropped across it, and so on. The ratio of voltage to rate of change of current is called **inductance**.
- The higher the frequency of the AC, the faster the current changes, and so the greater the voltage drop across the inductor. In other words, the voltage dropped depends on the frequency of the AC supply. This is **not** the case with pure resistors, where frequency has no effect.
- We describe this behaviour in terms of the **(inductive) reactance**, X_L , defined, in the same way as resistance, as $X_L = V / I$. As a result, the units of reactance are ohms.
- The inductive reactance measures the opposition of the inductor to changing current. The higher the frequency, f , the greater the change in current. In fact, the formula for inductive reactance is: $X_L = 2 \pi f L$
- Using your measurements, calculate the X_L , from the formula: $X_L = V / I$ and compare that with the value calculated using $X_L = 2 \pi f L$ where $L = 47\text{mH}$.
- Carry out these calculations and complete the following table with your results:

Frequency	Inductive reactance $X_L = V / I$	Inductive reactance $X_L = 2 \pi f L$
50Hz		
100Hz		
500Hz		
1kHz		

For your records:

- The opposition of an inductor to changing currents is called inductive reactance, X_L , given by the formula: $X_L = 2 \pi f L$ where f is the AC frequency, and L is the inductance of the inductor.
- It can also be obtained from the formula $X_L = V / I$, where V and I are rms voltage and current respectively.
- Inductance is measured in a unit called the Henry, (H) and reactance in ohms.
- Complete the following:

When the AC frequency is doubled, the inductive reactance is

When the AC frequency is halved, the inductive reactance is

Worksheet 19

AC and capacitors

w16a



An electric current sets up a **magnetic** field inside an inductor. This then opposes changes to electric *currents*. An electric current sets up an **electric** field across the plates of a capacitor. This opposes changes to the *voltage* applied to the capacitor.


Before the voltage can increase, electrons must flow onto the plates of the capacitor, increasing the electric field. This requires energy.

When the voltage starts to decrease, electrons flow off the plates, reducing the electric field. These electrons try to maintain the voltage across the capacitor's plates.

Capacitors behave rather like buckets in a water circuit. They must fill up before any water flows anywhere else in the circuit. When the flow of water starts to fall, excess water flows from the bucket, trying to maintain the flow.

Over to you:

- Connect a $1\mu\text{F}$ capacitor in series with the signal generator, as shown in the circuit diagram.
- Use enough connecting links so that the current can be measured at point **A**.
- Set the signal generator to the maximum output ($5V_{pp}$) AC voltage at a frequency of 50Hz.
- Remove the connecting link at **A**, and connect a multimeter, set to read up to 20mA AC, in its place.
- Record the current flowing at point **A** in the table.
- Remove the multimeter and replace link **A**.
- Set up the multimeter to read AC voltages of up to 20V and connect it in parallel with the capacitor.
- Record the voltage in the table.
- Now change the signal generator frequency to 100Hz and repeat the measurements. Record them in the table.
- Do the same for frequencies of 500Hz and 1kHz (1,000Hz). Again, record the measurements in the table.

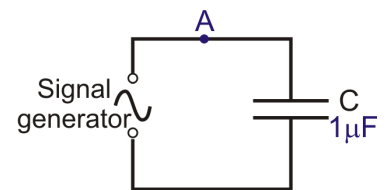

w16b



w16c

Frequency	Current I	Voltage V
50 Hz		
100 Hz		
500 Hz		
1 kHz		

Worksheet 19

AC and capacitors



So what?

- For resistors, double the *current* through the resistor and you double the voltage dropped across it, and so on. For inductors, double the *rate of change of current* through the inductor and you double the voltage dropped across it, and so on.
- Capacitors oppose changing *voltage*. The faster the *rate of change of voltage*, the greater the current needed to charge or discharge the capacitor. The higher the frequency of the AC, the faster the *voltage* changes, and so the greater the current flowing in the circuit. In other words, the current depends on the frequency of the AC supply.
- We describe this behaviour in terms of the **capacitive reactance**, X_C , defined, in the same way as resistance, as $X_C = V / I$. As before, the units of reactance are ohms.
- Capacitive reactance measures the opposition of the capacitor to changing current. The formula for capacitive reactance is: $X_C = 1 / (2 \pi f C)$
- Capacitors are mirror images of inductors. As the frequency of the AC supply increases, an inductor offers more opposition, (inductive reactance increases, and current decreases) whereas a capacitor offers less opposition, (capacitive reactance decreases and current increases).
- Using your measurements, calculate the X_C , using both :

$$X_C = V / I \quad \text{and} \quad X_C = 1 / (2 \pi f C) \quad \text{where } C = 1\mu\text{F}$$

- Carry out those calculations and complete the following table with your results:

Frequency	Capacitive reactance $X_C = V / I$	Capacitive reactance $X_C = 1 / (2 \pi f C)$
50Hz		
100Hz		
500Hz		
1kHz		

For your records:

- The opposition of a capacitor to changing voltage is called capacitive reactance, X_C , given by: $X_C = 1 / (2 \pi f C)$ where f is the frequency of the AC signal, and C is the capacitance.
- It can also be obtained from the formula $X_C = V / I$, where V and I are rms voltage and current respectively.
- Capacitance is measured in farads (F), though, in practice, this unit is too large. Most capacitors have values given in microfarads (μF).
- Complete the following:
When the AC frequency is doubled, the capacitive reactance is
- When the AC frequency is halved, the capacitive reactance is

Worksheet 20

L-R series circuit



w17a


When an inductor and a resistor are connected in series, the pair act as a voltage divider, but with an important difference - the way they share an AC voltage changes with frequency. The circuit is known as a series L-R circuit.

As it is a series circuit, the same current flows everywhere.

The opposition to the current comes in two forms, the resistance of the resistor, which is independent of frequency, and the reactance of the inductor, which increases as the frequency increases. Together, these combine to make what is known as the impedance of the circuit.

Over to you:

- Connect a 270Ω resistor, and a 47mH inductor in series with the signal generator, as shown in the circuit diagram.
- Use enough connecting links so that the current can be measured at point **A**.
- Set the signal generator to to the maximum output ($5V_{pp}$) AC voltage at a frequency of 100Hz .
- Remove the link at **A**, and connect a multimeter, set to read up to 20mA AC , in its place.
- Record the current flowing at point **A** in the table.
- Remove the multimeter and replace link **A**.
- Set up the multimeter to read AC voltages of up to 20V . Connect it to measure the signal generator voltage, V_s , applied across the two components, and record it in the table.
- Measure the voltage V_L , across the inductor, and then the voltage V_R , across the resistor. Record these voltages in the table.
- Next, set the signal generator to a frequency of 1kHz . and repeat the measurements.
- Record them in the table.

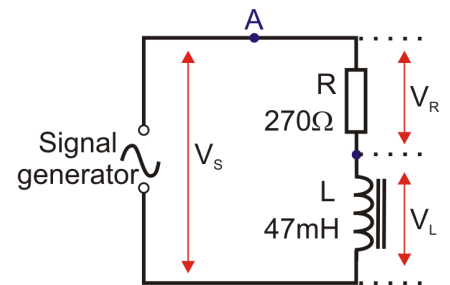

w17b

Measurement	AC frequency = 100Hz	AC frequency = 1kHz
Current at point A in mA		
Supply voltage V_s		
Voltage V_R across 270Ω resistor		
Voltage V_L across 47mH inductor		

Worksheet 20

L-R series circuit



So what?

Theory allows us to calculate the quantities that you just measured. You can then compare the two results.

- The two effects limiting the current are:
 - the resistance of the resistor, $R = 270\Omega$;
 - the reactance X_L of the inductor.
 - **At the first frequency, 100Hz:** $X_L = 2 \pi f L = 2 \pi (100) \times (47 \times 10^{-3}) = 29.5\Omega$
- The voltage across the resistor is in phase with the current through it. The voltage across the inductor is 90° ahead of the current. As a result, we cannot simply add together resistance and reactance. Instead, we combine them using the impedance formula which takes phase into account: $Z = (R^2 + (X_L - X_C)^2)^{1/2}$
- In this case, there is no capacitive reactance, and so:
$$Z = (R^2 + X_L^2)^{1/2} = ((270)^2 + (29.5)^2)^{1/2} = 271.61\Omega$$
- We can use this to calculate current, using the formula:
$$I = V_S / Z \quad \text{where } V_S = \text{AC signal generator voltage}$$
 - Use your measured value of V_S to calculate I .
 - Use this in the formula $V_R = I \times R$ to calculate the voltage V_R across the resistor.
 - Use it again in the formula $V_L = I \times X_L$ to calculate the voltage, V_L , across the inductor.
- Check these results against your measured values.
- **At the second frequency, 1kHz:**
 - the share of the AC voltage changes - the higher frequency increases the reactance of the inductor to 10 times its earlier value, so $X_L = 295.3 \Omega$, and the inductor takes a much bigger share of the AC voltage;
 - the output impedance of the signal generator may change;
- Repeat the calculations at 1kHz, and check your results against the measured values.

For your records:

- When the rms value of supply voltage is used, all currents and voltages will be rms.
- At frequency f , the reactance of the inductor is: $X_L = 2 \pi f L$.
- The impedance of a L-R circuit is: $Z = (R^2 + X_L^2)^{1/2}$
- The rms current is given by: $I = V_S / Z$ where $V_S = \text{AC supply rms voltage}$.
- The resulting rms voltage across the resistor: $V_R = I \times R$
- The resulting rms voltage across the inductor: $V_L = I \times X_L$


Worksheet 21

C-R series circuit

An inductor and a resistor, connected in series, act as a voltage divider, which depends on AC frequency. For the inductor, reactance increases as the frequency increases.

A similar effect is seen when a capacitor and resistor are connected in series, but with an important difference - the reactance of the capacitor decreases as the frequency increases.


As before, since it is a series circuit, the same current flows in all parts of the circuit.

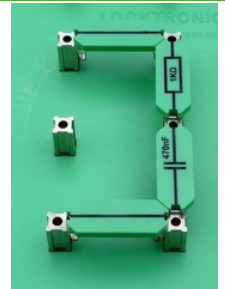

w18a

Over to you:

- Connect a 270Ω resistor, and a $1\mu\text{F}$ capacitor in series with the signal generator, as shown in the circuit diagram.
- Use enough connecting links so that the current can be measured at point **A**.
- Set the signal generator to the maximum output ($5V_{pp}$) AC voltage with a frequency of 100Hz.
- Remove the connecting link at **A**, and connect a multimeter, set to read up to 20mA AC, in its place. Record the current flowing at point **A** in the table.
- Remove the multimeter and replace link **A**.
- Set up the multimeter to read AC voltages of up to 20V. Connect it to measure the signal generator output voltage, V_s , applied across the two components, and record it in the table.
- Measure the voltage V_C , across the capacitor, and then the voltage V_R , across the resistor. Record these voltages in the table.
- Next, set the signal generator to a frequency of 1kHz., repeat the measurements and record them in the table.

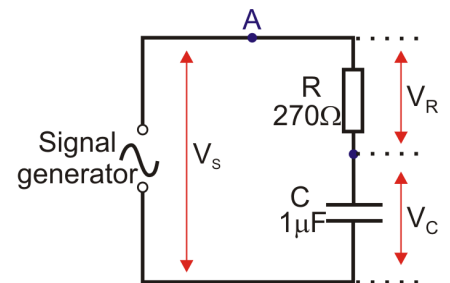

w18b

Measurement	AC frequency = 100Hz	AC frequency = 1kHz
Current at point A in mA		
Voltage V_R across R		
Voltage V_C across C		

Worksheet 21

C-R series circuit



So what?

Once again, theory allows us to calculate the quantities that you just measured, and then you can then compare the results.

- The two effects limiting the current are:
 - the resistance of the resistor, $R = 270\Omega$;
 - the reactance X_C of the capacitor:
 - **At the first frequency, 100Hz:** $X_C = 1 / (2 \pi f C) = 1 / (2 \pi (100) \times (1 \times 10^{-6})) = 1591.5\Omega$
- Voltage and current are in phase in the resistor. There is a phase lag of 90° between voltage and current in the capacitor. Again, the formula for impedance, Z , takes this phase shift into account. In this case, there is no inductive reactance, and so:
using $Z = (R^2 + (X_L - X_C)^2)^{1/2} = (R^2 + X_C^2)^{1/2}$
 $= ((270)^2 + (1591.5)^2)^{1/2} = 1614.3\Omega$
- We can use this value of impedance to calculate the current, using the formula:
 $I = V_S / Z$ where $V_S =$ AC signal generator voltage
 - Use your measured value of V_S to calculate I .
 - Use this in the formula $V_R = I \times R$ to calculate the voltage V_R across the resistor.
 - Use it again in the formula $V_L = I \times X_C$ to calculate the voltage, V_C , across the capacitor.
- Check these results against your measured values.
- **At the second frequency, 1kHz:**
 - again, the share of the AC voltage changes. The higher frequency reduces the reactance of the capacitor to one-tenth its earlier value - i.e. 159.2Ω . The capacitor takes a much lower share of the AC voltage;
 - the output impedance of the signal generator may change.
- Repeat the calculations at 1kHz, and check your results against the measured values.

For your records:

- At a frequency f , the reactance of a capacitor is: $X_C = 1 / (2 \pi f C)$.
- The impedance of a C-R circuit is: $Z = (R^2 + X_C^2)^{1/2}$.
- The rms current is given by: $I = V_S / Z$ where $V_S =$ AC supply rms voltage.
- The resulting rms voltage across the resistor is $V_R = I \times R$.
- The resulting rms voltage across the capacitor $V_C = I \times X_C$.

Worksheet 22

L-C-R series circuit



At this point, AC circuits become very interesting!


In inductors, reactance increases with frequency. In capacitors it decreases with frequency, and in resistors frequency has no effect

A series LCR circuit has all three, though the resistance may be that of the inductor wire itself, rather than that of a discrete resistor.

At one particular frequency, the *resonant frequency*, the circuit behaves in an extraordinary way!

Over to you:

- Connect a 47mH inductor and a 1 μ F capacitor in series, as shown in the circuit diagram.
- Set the signal generator to the maximum output (5V_{pp}) AC voltage at a frequency of 100Hz.
- Remove the connecting link at **A**, and connect a multimeter, set to read up to 20mA AC, in its place.
- Record the current flowing at point **A** in the table.
- Remove the multimeter and replace the link.
- Set up the multimeter to read AC voltages of up to 20V. Connect it to measure the signal generator output voltage, V_s, and record it in the table.
- Change the frequency to 200Hz, and repeat the measurements. Again record them in the table.
- Repeat the measurements for each of the frequencies listed and record them in the table.

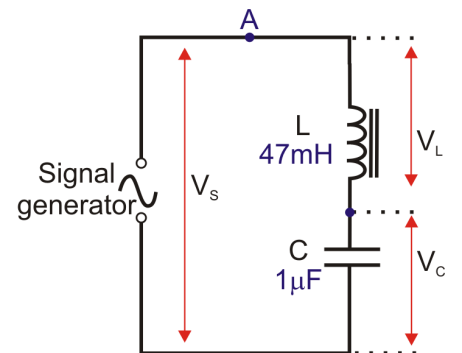


Frequency in Hz	Sig. gen. output V _s	Current at A in mA	Impedance in k Ω
100			
200			
300			
400			
500			
600			
700			
800			
900			
1000			

Worksheet 22

L-C-R series circuit

So what?

- Your results table may not make it obvious what is happening, partly because the output impedance of the AC power supply will probably have an effect on output voltage. This will become clearer when we look at the impedance of the circuit.
- Complete the table, by calculating the impedance, Z , at each frequency, using the formula:
$$Z = V_S / I$$
- At low frequencies, the capacitor has a high reactance, and the inductor a low reactance.
- As the frequency rises, the capacitor's reactance falls, but the inductor's reactance increases.
- At one value of frequency, called the resonant frequency, the combined effect of the two is a minimum.
At this frequency, the impedance of the circuit is a **minimum**.
- Plot a graph of impedance against frequency, and use it to estimate the resonant frequency. A typical frequency response curve is shown below.

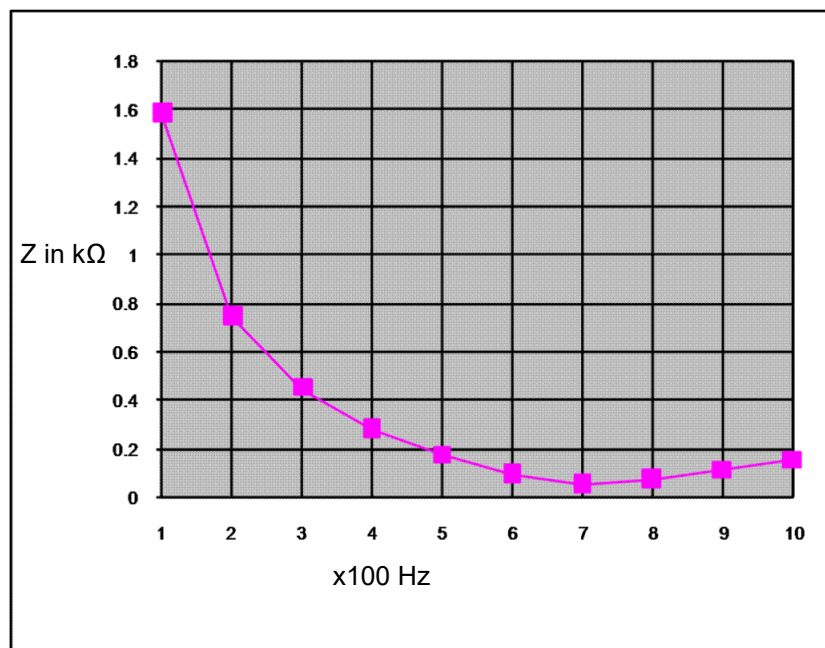

For your records:

For a series LCR circuit, the impedance is a minimum at the resonant frequency, f_r .

This can be calculated from the formula $f_r = \frac{1}{2\pi\sqrt{L \times C}}$

Worksheet 23

Inductor and Resistor in Parallel

When an inductor and a resistor are connected in parallel, the pair act as a current divider, which shares the AC current in a way that changes with the frequency of the AC supply.

Since the inductor and resistor are connected in parallel, they have the same voltage across them, but take a current which depends on resistance / reactance.

Over to you:

Connect a 270Ω resistor and a 47mH inductor in parallel with the AC supply, as shown.

Use enough connecting links so that the current can be measured at points **A**, **B** and **C**.

Set the AC power supply to output a frequency of 100Hz .


Remove the connecting link at **A**, and connect a multimeter, set to read up to 20mA AC, in its place. Record the current flowing at point **A** in the table. Remove the multimeter and replace link **A**.

Do the same for the currents flowing at points **B** and **C**.

Set up the multimeter to read AC voltages of up to 20V . Connect it to measure the AC supply voltage, V_s , applied across the two components, and record it in the table.

Next, set the AC power supply to a frequency of 1kHz .

Repeat the measurements of currents and the voltage across the two components, and record them in the table.

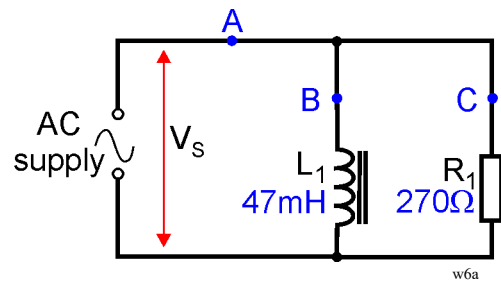

Measurement	AC frequency = 100Hz	AC frequency = 1kHz
Current at point A in mA		
Current at point B in mA		
Current at point C in mA		
Supply voltage V_s		

Worksheet 23

Inductor and Resistor in Parallel



So what?

- As before, we are going to calculate the quantities you measured, so that you can compare the two. Use your value of V_S to complete the calculations below.

At a frequency of 100Hz

- Resistance of resistor $R_1 = 270\Omega$,
and so the current through it, (at point **C**), $I_C = V_S / R = \dots\dots\dots / 270 = \dots\dots\dots$ A
- Reactance X_L of inductor L_1 is given by:

$$\begin{aligned} X_L &= 2 \pi f L \\ &= 2 \pi (100) \times (47 \times 10^{-3}) \\ &= 29.5\Omega \end{aligned}$$

and so the current through it, (at point **B**), $I_B = V_S / X_L = \dots\dots\dots / 29.5 = \dots\dots\dots$ A

- The current at **A**, I_A , is found by combining these currents, but not by simply adding them.

These currents are not in phase! The current, I_C , through the resistor is in phase with V_S . The current, I_B , through the inductor lags behind V_S by 90° .

The currents can be combined using the formula: $I_A^2 = I_B^2 + I_C^2$

or: $I_A = \sqrt{I_B^2 + I_C^2}$

- Use your results to the calculations above to calculate a value for I_A .
- Check these results against your measured values.

At a frequency of 1kHz

- Notice how the share of the *current* changes. The reactance of the inductor is 10 times bigger (i.e. 295.3Ω .) Thus, the inductor takes offers a much more difficult route for the current and so passes a much smaller current.
- You need to measure the AC supply voltage across the resistor and inductor again. The output impedance of the AC power supply itself will have an effect.
- Repeat the calculations at the new frequency, and check your results against the measured values.



For your records:

For a parallel combination of a resistor and inductor, the total current I_S is given by:

$$I_S^2 = I_L^2 + I_R^2$$

where I_L = current through inductor and I_R = current through resistor.

Using the AC version of Ohm's Law:

$$I_L = V_S / X_L \quad \text{and} \quad I_R = V_S / R$$

Worksheet 24

Capacitor and Resistor in Parallel

When a capacitor and a resistor are connected in parallel, they act as a current divider, sharing the AC current in a way that changes with the frequency of the AC supply.

However, in this case, when the supply frequency increases, the reactance of the capacitor *decreases*, making it an *easier* route for the current to flow through.

Over to you:

Connect a 270Ω resistor and a $1\mu\text{F}$ capacitor in parallel with the AC supply, as shown.

Use enough connecting links so that the current can be measured at points **A**, **B** and **C**.

Set the AC power supply to output a frequency of 100Hz.


Remove the connecting link at **A**, and connect a multimeter, set to read up to 20mA AC, in its place. Record the current flowing at point **A** in the table. Remove the multimeter and replace link **A**.

Do the same for the currents flowing at points **B** and **C**.

Set up the multimeter to read AC voltages of up to 20V. Connect it to measure the AC supply voltage, V_s , applied across the two components, and record it in the table.

Next, set the AC power supply to a frequency of 1kHz.

Repeat the measurements of currents and the voltage across the two components, and record them in the table.

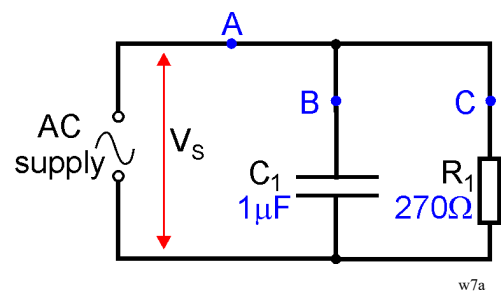

Measurement	AC frequency = 100Hz	AC frequency = 1kHz
Current at point A in mA		
Current at point B in mA		
Current at point C in mA		
Supply voltage V_s		

Worksheet 24

Capacitor and Resistor in Parallel



So what?

- As before, we are going to calculate the quantities you measured, so that you can compare the two. Use your value of V_S to complete the calculations below.

At a frequency of 100Hz

- Resistance of resistor $R_1 = 270\Omega$,
and so the current through it, (at point **C**), $I_C = V_S / R = \dots\dots\dots / 270 = \dots\dots\dots$ A
- Reactance X_C of capacitor C_1 is given by:

$$\begin{aligned} X_C &= 1 / 2 \pi f C \\ &= 2 \pi (100) \times (1 \times 10^{-6}) \\ &= 1591.5\Omega \end{aligned}$$

- and so the current through it, (at point **B**), $I_B = V_S / X_C = \dots\dots\dots / 1591.5 = \dots\dots\dots$ A
- Again, these currents are not in phase. The current, I_C , through the resistor is in phase with V_S . The current, I_B , through the capacitor leads V_S by 90° .

The current at **A**, I_A , is found by combining these currents, using the formula:

$$\begin{aligned} I_A^2 &= I_B^2 + I_C^2 \\ \text{or: } I_A &= \sqrt{I_B^2 + I_C^2} \end{aligned}$$

- Use your results to the calculations above to calculate a value for I_A .
- Check these results against your measured values.

At a frequency of 1kHz

- Once again. notice how the share of the current changes. The reactance of the capacitor is 10 times *smaller* (i.e. 159.2Ω .) Thus, the capacitor offers a much easier path for the current and so passes a much *bigger* current.
- As usual, measure the AC supply voltage across the resistor and inductor again. The output impedance of the AC power supply itself will have an effect.
- Repeat the calculations at the new frequency, and check your results against the measured values.



For your records:

For a parallel combination of a resistor and capacitor, the total current I_S is given by:

$$I_S^2 = I_C^2 + I_R^2$$

where I_C = current through capacitor and I_R = current through resistor.

Using the AC version of Ohm's Law:


$$I_C = V_S / X_C \quad \text{and} \quad I_R = V_S / R$$

Worksheet 25

Parallel LCR circuit



ist2_1556878-rtid

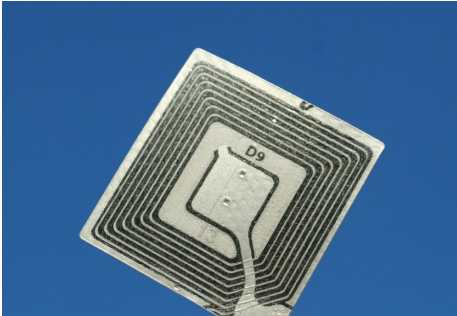

We return to the question of resonance again. In worksheet 5, you investigated a series circuit, which favoured one particular frequency, known as the resonant frequency, more than any other. Now you take a look at the behaviour of a parallel circuit.


Remember - inductors have a reactance that increases with frequency, capacitors have a reactance that decreases with frequency and resistors don't care about frequency.

Our parallel circuit has an inductor connected in parallel with a capacitor. In reality, the resistance of the wire used to make the inductor, appears in series with the inductor. To begin with, we assume that this is so small that we can ignore it. The procedure is the same as that used for the series circuit - measure current and voltage over a range of frequencies, and use these measurements to calculate the impedance of the circuit at that frequency.

Over to you:

Connect a 47mH inductor and a 1 μ F capacitor in parallel, as shown in the circuit diagram.

Set the AC power supply to output a frequency of **100Hz**.

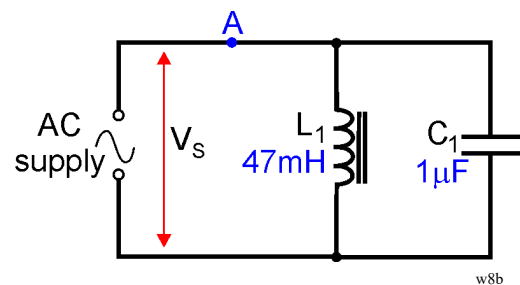

Remove the connecting link at **A**, and connect a multimeter, set to read up to 20mA AC, in its place. Record the current flowing at point **A** in the table. Remove the multimeter and replace the link.

Set up the multimeter to read AC voltages of up to 20V. Connect it to measure the AC supply voltage, V_s , applied across the two components, and record it in the table.

Change the frequency to 200Hz, and repeat the measurements. Again record them in the table.

Do the same for the other frequencies listed, and complete the table.

Fre- quency in Hz	AC supply voltage V_s in V	Current I at A in mA
100		
200		
300		
400		
500		
600		
700		
800		
900		
1000		

Worksheet 25

Parallel LCR circuit

So what?

- As before, the results will look clearer when we calculate the impedance of the circuit at the different frequencies.

- Complete the table, by calculating the impedance, Z , at each frequency, using the formula:


$$Z = V_S / I$$

- At low frequencies, the capacitor has a high reactance, and the inductor a low reactance, and so more current flows through the inductor than through the capacitor.

As the frequency rises, the capacitor's reactance falls, but the inductor's reactance increases. Gradually, the capacitor offers an easier path for the current than does the inductor. The resonant frequency is where the combined effect of the two, the circuit impedance, is a **maximum**.

- Plot a graph of impedance against frequency, and use it to estimate the resonant frequency. A typical frequency response curve is shown opposite.

Fre- quency in Hz	AC supply voltage V_S in V	Current I at A in mA	Imped- ance Z in k Ω
100			
200			
300			
400			
500			
600			
700			
800			
900			
1000			

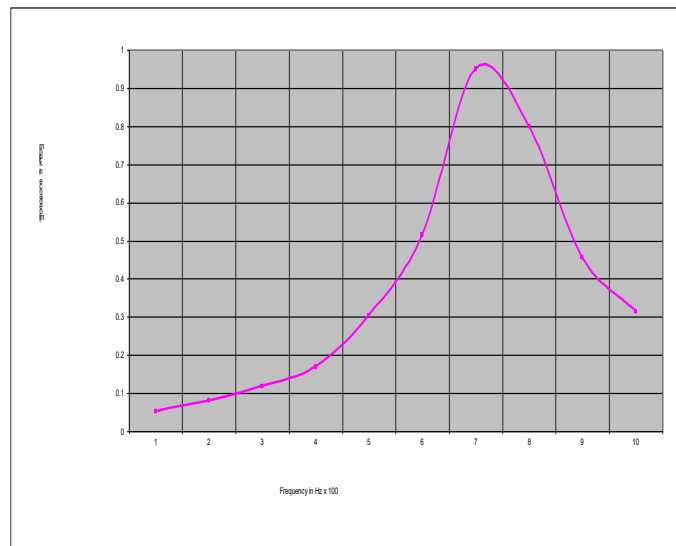

For your records:

For a parallel LCR circuit, the impedance is a maximum at the resonant frequency, f_R .

At frequencies below f_R , the inductor offers an easier route for the current. At frequencies above f_R , the capacitor offers an easier route.

Worksheet 26

Q Factor and Bandwidth



What connects trombones, bridges and wine glasses with LCR circuits? They all have a resonant frequency.

In trombones, air vibrates at the resonant frequency, producing a musical note - usually desirable! Resonance can have undesirable effects too. Everyone has heard the story of the opera singer singing so loud that she shatters a wine glass. Bridges can also resonate. In November 1940, the bridge over Tacoma Narrows, near Seattle, USA, collapsed when the aerodynamic effects of the wind blowing over it made it vibrate at its resonant frequency. The replacement was made more rigid - given more resistance to vibration!

Well - LCR circuits behave in the same way when you add some resistance! It suppresses the vibration, making it less likely to build up.


ist2_7725727-sound-noise-concept-bluish-

Over to you:

Connect a 47mH inductor and a 1 μ F capacitor in series with the AC supply. This is the circuit you used in worksheet 5, though the procedure will be slightly different!

Set the AC supply to output a frequency of **100Hz**.

Connect a multimeter to measure the AC voltage, V_S , and record it in the table. Then measure, and record, the voltage, V_C across the capacitor.

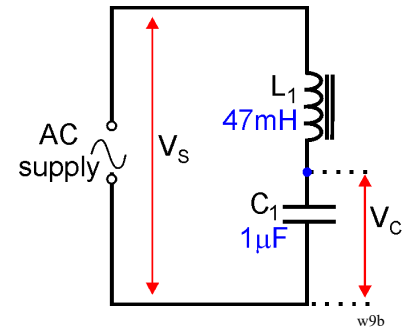

Change the frequency to 200Hz, repeat the measurements and record them.

Do the same for the other frequencies listed, and complete the table.

Next, connect a 100 Ω resistor in series with the inductor and capacitor, and repeat the measurements. Finally, swap the 100 Ω resistor for a 180 Ω resistor and repeat the measurements.

Frequency in Hz	No series resistor		100 Ω series resistor		180 Ω series resistor	
	V_S in V	V_C in V	V_S in V	V_C in V	V_S in V	V_C in V
100						
200						
300						
400						
500						
600						
700						
800						
900						
1000						

Worksheet 26

Q Factor and Bandwidth



So what?

- The 'Q' in Q factor stands for 'Quality'. There are several ways to view the Q factor of a resonant circuit.
 - The higher the quality, the longer it takes for the oscillations to die out.
 - The Q factor is a measure of the sharpness of the peak of the frequency response curve.
 - It is the ratio of energy stored, to the energy lost per cycle of the AC.
 - The higher the quality, the greater the voltage amplification of a resonant circuit.

- We will use this final version.

At resonance, the voltage across the inductor, V_L , is equal to the voltage across the capacitor, V_C .

The voltage amplification refers to the ratio of the voltage across the capacitor (or inductor, as it is equal,) to the supply voltage, V_S *at resonance*.


In other words: $Q \text{ factor} = V_C / V_S$

- Complete the table by calculating the ratio (V_C / V_S) for each frequency and for each value of series resistor used. The first row shows the value of the series resistor added to the resistance of the inductor, i.e. the resistance of the long length of wire used to wind the coil inside it.
- Plot three graphs to show the frequency responses of your three circuits, (with no added resistance, with 100Ω added in series and with 180Ω added in series.)

Frequency in Hz	0Ω	100Ω	180Ω
	V_C / V_S	V_C / V_S	V_C / V_S
100			
200			
300			
400			
500			
600			
700			
800			
900			
1000			

The results should resemble those shown opposite.

- Use your graph to estimate the Q factor of the L-C circuit.
- Notice the effect on the shape of the resonance curve, and on its Q factor of adding series resistance to the circuit.

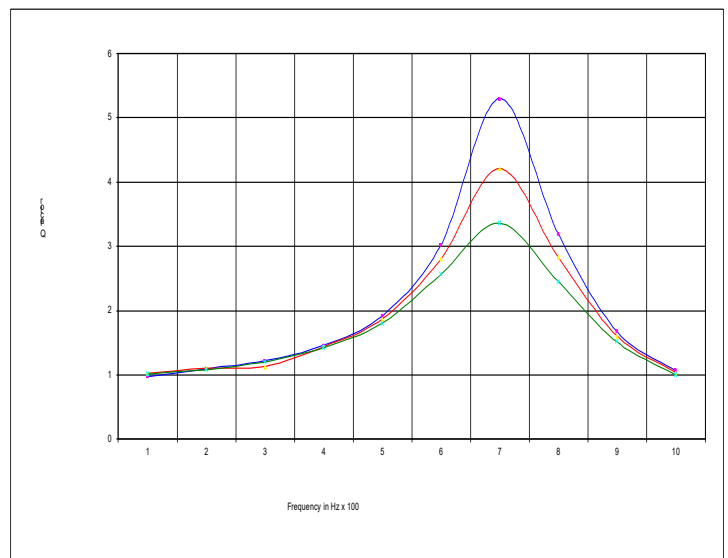

Worksheet 27

Transformers



A huge advantage of generating electricity as AC is that it allows the use of transformers, to step-up or step-down an AC voltage to any desired value.

Our treatment of the transformer links it, in four steps, to the principles we met earlier, where we saw that an electric current is generated when a magnetic field moves across a conductor.


In the transformer, the moving magnetic field is produced by an electromagnet supplied with AC.



Over to you:

Step 1 - Moving the magnet:

- Build the arrangement shown opposite.
- Suitable oscilloscope settings are given below.
- Plunge a magnet into the coil, and then pull it out, watching the oscilloscope as you do so.

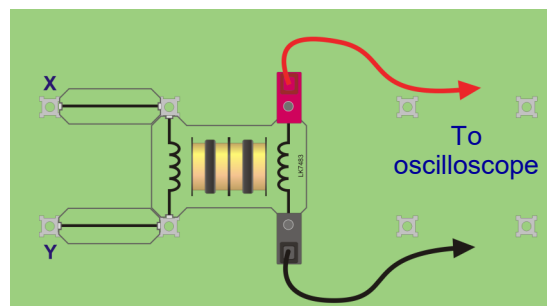

Step 2 - Electromagnet, not magnet:

- Now, connect the second coil, at **X** and **Y**, to a DC power supply, set to 3V.
- Switch the DC supply on and off, watching the trace as you do so.

Step 3 - AC not DC:

- This time, create a moving magnetic field by connecting points **X** and **Y** to a signal generator, set to an amplitude of 3V and a frequency of around 1kHz.
- Switch on the signal generator, and watch the trace.

Step 4 - Intensify the field:

- Slide a ferrite core down the middle of the two coils, and notice the effect this has.
- We now have a simple but very inefficient transformer!

Optional extension:

Investigate the effect of:

- changing the amplitude of the AC supply from the signal generator;
- changing the frequency of the AC supply from the signal generator;
- linking the coils with cores made from other materials, like steel, instead of ferrite.

Typical oscilloscope settings:

Timebase **Steps 1 and 2:** 1s/div **Steps 3 and 4:** 1ms /div (X multiplier x1)

Voltage range Input A - $\pm 500\text{mV}$ DC (Y multiplier x1) **(needs increasing for step 4.)**

Input B - Off


Worksheet 27

Transformers

So what?

The pictures show typical traces for this investigation:

- the upper one shows current spikes generated when the DC supply to the second coil is switched on and off.
- the lower one shows current generated when the second coil is connected to the AC supply .

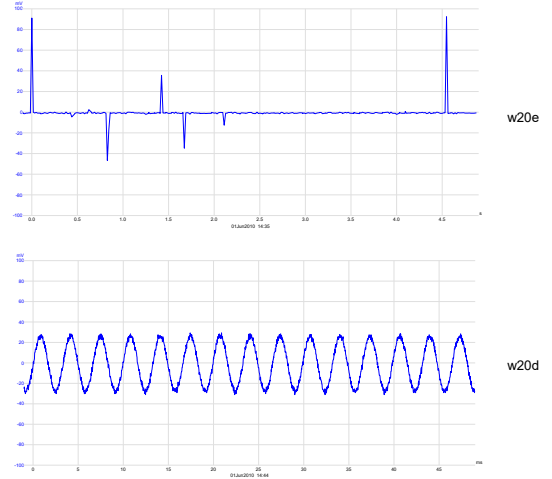

We saw earlier that the essential ingredients to generate electricity are a magnet, wire and movement. Here, we have replaced the magnet with an electromagnet (second coil), and produced movement by using an alternating magnetic field.

One coil, called the **primary**, is supplied with AC current, and generates an alternating magnetic field. This links with the other coil, called the **secondary**. As a result, an alternating voltage is generated in the secondary. This is the principle of the transformer.

Some refinements:

- The *strength* of the magnetic field in the primary depends on factors like:
 - the number of turns of wire in the primary coil
 - the current flowing through it, which, in turn, depends on the voltage applied to it.
- The *voltage* generated in the secondary coil depends on factors like:
 - the strength of the magnetic field generated by the primary
 - the number of turns of wire in the secondary coil
 - how effectively the magnetic field of the primary links with it.

In other words, the voltage generated in the secondary depends on the number of turns in the primary, and the number of turns in the secondary. The next worksheet explores this link.

For your records:

- Copy the circuit symbol for the transformer, given at the top of the previous page.
- Describe the role played by each of the three components in the transformer:
 - the primary coil,
 - the secondary coil,
 - the core.

Worksheet 28

Practical transformers

Transformers play an important role in many electrical and electronic applications by allowing AC voltages to be stepped up or down to any desired value.

In this worksheet you investigate the operation of a small transformer, which has a laminated steel core, when used for step-down and then step-up operation.



w21a


Over to you:

Step-down transformer:

In a step-down transformer, the primary coil, the one supplied with AC power, has more turns of wire than the secondary, the one that generates the transformer output voltage.

Here we use a commercial transformer with a turns ratio of 2:1, meaning that one coil has twice as many turns as the other. The primary will be the '2' coil, and the secondary the '1' coil.

- Build the system shown, which delivers power to a 1kΩ load. (Ignore any labelling on the transformer itself.)
- Connect a signal generator to the '2' coil (primary), using the low impedance output (typically 50Ω.) Set it to output a sine wave with frequency 300Hz, and amplitude 5V. (If in doubt, check these with your instructor.)
- Connect a multimeter, set on the 20V AC voltage range, to measure voltage V_P across the primary (the '2') coil, and then V_S across the secondary (the '1' coil.)
- Set the multimeter to the 20mA AC current range, and connect it to replace the link below the '2' coil, to read the primary current, I_P .
- Replace the connecting link and measure the secondary current, I_S in the same way.
- Record all measurements in the table.

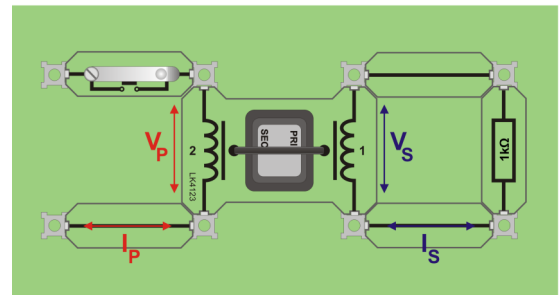

w21b

Step-up transformer:

In a step-up transformer, the primary coil has fewer turns than the secondary. In this case, the primary will be the '1' coil, and the secondary the '2' coil.

- The system is the same as above, except that the transformer carrier is now upside down.
- Connect the multimeter to measure the secondary voltage V_S . Adjust the amplitude of the signal from the signal generator until V_S is the same as in the previous investigation.
- Now measure and record V_P , I_P and I_S .


Reading	Step-down	Step-up
V_P		
V_S		
I_P		
I_S		

Worksheet 28

Practical transformers

So what?

The last worksheet looked at transformer principles, but the final device was very inefficient. This one uses an improved version - two coils, side by side, as before, but linked by a much more elaborate core, threading through the centre of the coils, and wrapped around the outside too. The result - more effective linkage between the magnetic field generated in the primary and the secondary coil.

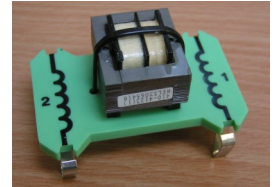

w21c

What the results show:

- Look at the ratio $V_P:V_S$ for both step-up and step-down transformers. The transformer equation says that, for an ideal transformer:


$$V_P / V_S = N_P / N_S$$

where N_P and N_S are the number of turns on the two coils.


- Next look at the ratio $I_P:I_S$ for both transformers.

In general terms:

- a step-up transformer 'steps up' the voltage (virtually doubles it) but 'steps down' the current - I_P is much greater than I_S .
- a step-down transformer 'steps down' the voltage, but delivers the same secondary current for a much smaller primary current.
- Both delivered the same voltage, V_S , to the $1k\Omega$ load, and so I_S , the secondary current, was very similar in both cases.

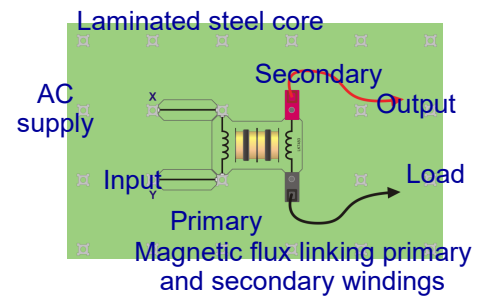

w21d

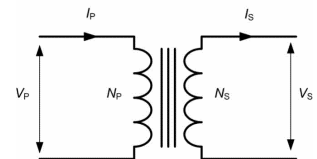

w21e

The acid test:

What about the power? Was it stepped up or stepped down?

Using the formula:

Power = Current x Voltage:

Power delivered to the primary coil,

$$P_P = I_P \times V_P = \dots\dots\dots \text{mW}$$

Power delivered from the secondary,

$$P_S = I_S \times V_S = \dots\dots\dots \text{mW}$$

For an ideal transformer (100% efficient):

$$P_P = P_S$$

$$\text{and } I_S / I_P = N_P / N_S$$

(Optional extension:)

- Investigate the effect of applied frequency on the output of the transformer. Research the topic of power matching to explain your results.

For your records:


- Copy the transformer equation, and explain what it means, in words.
- Explain what is meant by 'step-up' and 'step-down' when applied to transformers. Include the role of the number of turns of wire, and specify exactly what is stepped up, and what is stepped down in each case.

Worksheet 29

Diode characteristics


Diodes allow current to flow in one direction but not the other. The performance of a diode can be illustrated by plotting a graph of 'forward' and 'reverse' current against the applied voltage. This graph allows us to predict accurately how a diode will behave in a particular circuit and decide whether or not it is suitable that application.

In this worksheet you compare the characteristics of two different diodes. One is a general purpose low-voltage silicon diode (1N4001) whilst the other is a shottky diode.

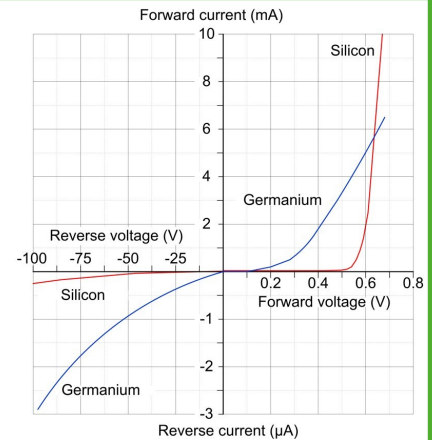


Over to you:

- Build the circuit shown opposite, to allow you to measure the **forward** characteristics of a diode.
- Set the DC power supply for an output of 4.5V.
- Set the voltmeter to the 20V DC range and the ammeter to the 20mA DC range.
- Use the 'pot' to vary the voltage, V_F , applied to the diode from 0.1V to 0.7V in steps of 0.1V.
- At each step, measure and record the forward current, I_F , in the table.
- Repeat this procedure for a Shottky diode.
- Next invert the diode, and change the power supply voltage to 12V, as shown in the lower diagram, .This allows you to measure the **reverse** characteristics of the two diodes.
- Change the ammeter to the 200 μ A DC range.
- Once again, use the 'pot' to vary the voltage applied to the diode, now called V_R , but this time you will only need to take current readings, I_R , at 0V, 5V and 10V.
- Record them in the table.
- Repeat the process for the other diode.

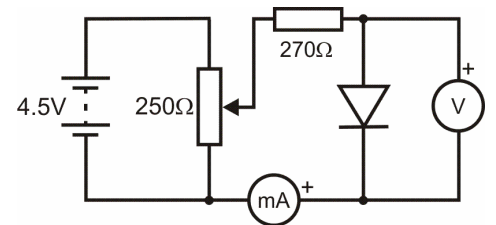

Forward characteristics		
V_F	I_F (1N4001)	I_F (Shottky)
0		
0.1		
0.2		
0.3		
0.4		
0.5		
0.6		
0.7		

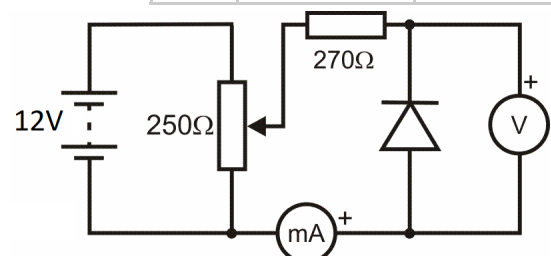

Reverse characteristics		
V_R	I_R (1N4001)	I_R (Shottky)
0		
5.0		
10.0		


Worksheet 29

Diode characteristics



So what?

- Use the axes like those shown below to plot your results as graphs of applied voltage against current for both the forward and reverse directions and for both diodes. Notice that the voltage and current scales are different for the two directions.

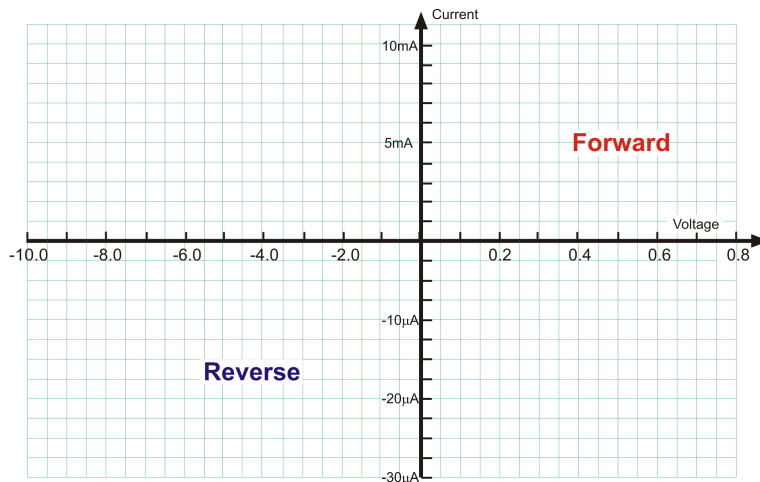


- Describe what the graphs tell you about the behaviour of the two kinds of diode.
- What forward voltage is required to make each of the diodes begin to conduct?

Silicon

Shottky

For your records:

- Diodes are usually made from semiconducting crystals. The behaviour of the device depends on the material it is made from, as the graph shows.
- The diode is a 'one-way valve'. It allows a current to flow through it in only one direction. (A resistor behaves in exactly the same way no matter which way the current flows. Try it !)
- When it is forward-biased, a silicon diode conducts, with a voltage drop of about 0.7V across it.
- When reverse-biased, it does not conduct (for low voltages, at any rate.)
- When forward-biased, a Shottky diode conducts, with a voltage drop of about 0.2V across it. Some Germanium diodes have a forward voltage drop of around 0.3V.

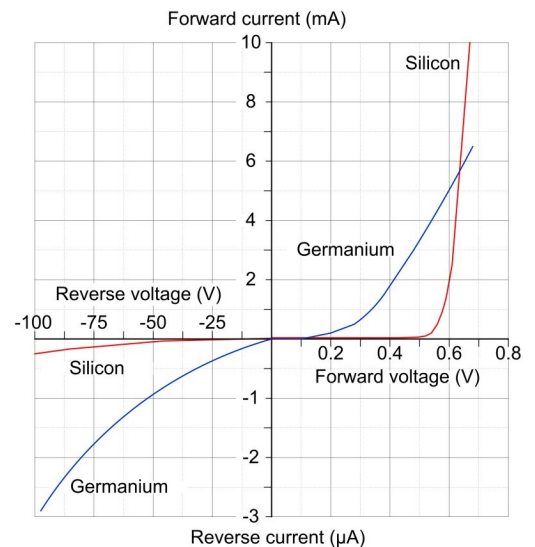

w22a

Worksheet 30

Half-wave rectifier



One of the most common applications for a diode is to convert alternating current (AC) to direct current (DC) in a **rectifier** circuit. This exploits the unidirectional properties of a diode - current flows only when the anode is positive with respect to the cathode. The next issue is to maintain the current flow while the diode is not conducting. This involves the use of a large value capacitor acting as a **reservoir** for charge. This maintains current flow, and output voltage, until the diode conducts again.



w23a

Over to you:

- Build circuit **A**. The AC power supply provides the input. The 180Ω resistor acts as the load for the rectifier circuit.
- Connect a DC voltmeter to measure the DC output voltage, V_{OUT} . Record it in the first line of the table.
- Connect a dual trace oscilloscope, using two 'x10' probes, so that channel A displays at least two complete cycles of the input waveform and channel B displays the corresponding output. Connect the oscilloscope ground terminals to the negative rail of the circuit.
- Modify the circuit by adding a $47\mu\text{F}$ capacitor, C, connected as in circuit **B**.
Take care to connect it the right way round, as shown!
- Notice the effect on the oscilloscope trace.
- Again measure and record the output voltage, V_{OUT} .
- Repeat this process for all the other values of capacitor C, given in the table.

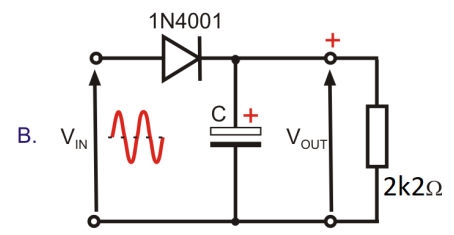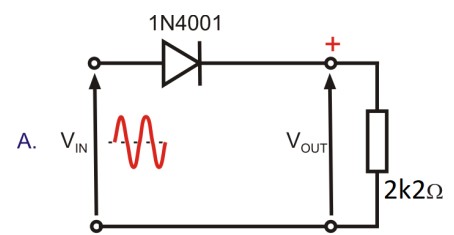

Capacitor	V_{OUT}
None - circuit A	
$47\mu\text{F}$	
$100\mu\text{F}$	
$150\mu\text{F}$	
$1000\mu\text{F}$	

Typical oscilloscope settings:

Timebase 10 ms/div

Voltage range (Both Inputs) $\pm 5\text{V}$ DC with x10 probes

Trigger Mode Repeat

Trigger Channel

ch.A

Trigger Direction Rising

Trigger Threshold - 4 mV


Worksheet 30

Half-wave rectifier

So what?

The diode allows current to flow through it (and the load) in one direction only. It acts as a small resistor for currents trying to flow in one direction (when it is forward-biased,) and as a very large resistor for currents trying to flow in the other direction, (when reverse-biased.)

The first diagram shows a typical trace obtained from the first circuit. The AC input is turned into a DC output (rectified.) Notice that, while the output is DC (as it never crosses the 0V line,) it is not steady DC.

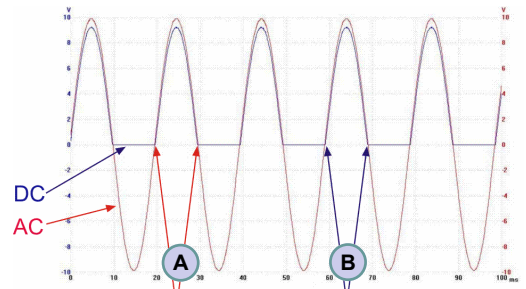


w23c

A - AC current changes direction here
B - DC current does not change direction


The second diagram shows the same signal, using a different time base setting for the oscilloscope (2ms/div.) to show the rectification in more detail.

In particular, notice that the DC output, (the lower one), is approximately 0.7V lower than the AC input. The diode does not really conduct until the voltage across it reaches 0.7V. Thereafter, there is a 0.7V drop across the diode, leaving the DC output 0.7V below the AC input at all points.

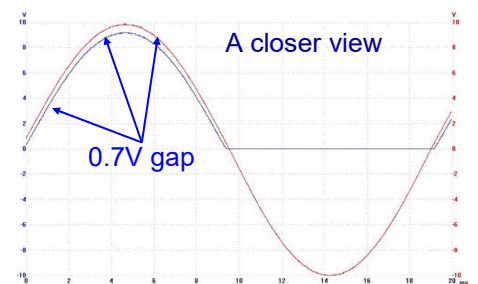

w23d

The third diagram shows the effect of adding a smoothing capacitor. The output voltage is now both DC and steady.

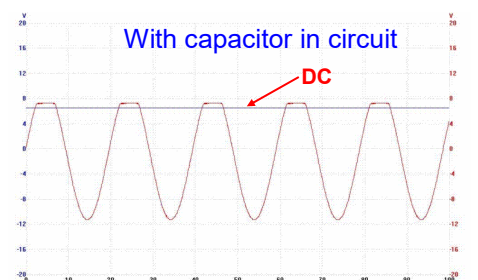

w23e

For your records:

- Sketch a voltage-time graph for the output signal for circuit **A**.
- Sketch a voltage-time graph for the output signal for circuit **B** with the 1000 μ F capacitor.
- Explain the difference between these two graphs.
- Which value of reservoir capacitance produced the highest value of DC output voltage? Why was this?

Worksheet 31


Full-wave bridge rectifier

The diode in a half-wave rectifier conducts for no more than 50% of the time. This is inefficient and requires large reservoir capacitors.

Most practical power supplies use four diodes to maintain the current flow through the load on both positive and negative half-cycles of the supply.

In practice, they use either four individual diodes (as shown opposite) or a single component, a bridge rectifier, where the four diodes are encapsulated in a single package.


In this worksheet you investigate a full-wave rectifier, using four diodes.

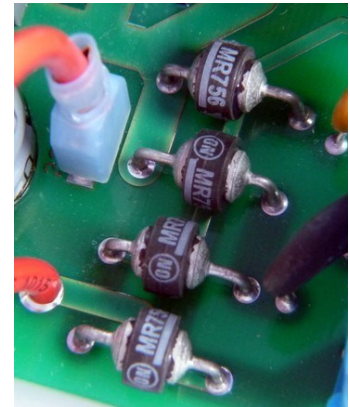

w24a

Over to you:

- Build the circuit shown opposite, using the AC power supply as the input once again.
- Measure the DC output voltage, V_{OUT} and record it in the first line of the table (for 'Capacitor - None').
- Using the same time base and voltage sensitivity settings as before, connect an oscilloscope to display at least two complete cycles of the **output**.

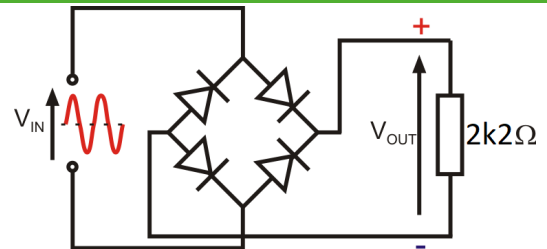


Do not try to display the input waveform at the same time.

The common ground connection will short-circuit one of the diodes!

The input waveform is the same as that displayed in the previous worksheet.

- Modify the circuit by adding a $47\mu\text{F}$ reservoir capacitor, C, as in the second circuit.

Take care to connect it the right way round, as shown!

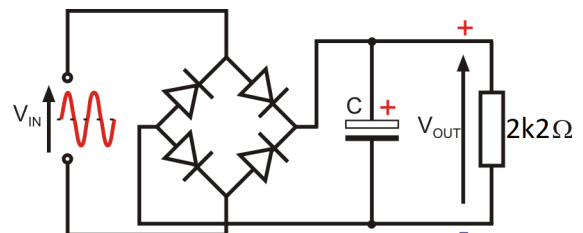

w24c

- Notice the effect on the oscilloscope trace.
- Measure and record the DC output voltage, V_{OUT} .
- Use each of the other table. Measure and record the

Capacitor	V_{OUT}
None	
$47\mu\text{F}$	
$100\mu\text{F}$	
$150\mu\text{F}$	
$1000\mu\text{F}$	

capacitor values shown in the DC output voltage, V_{OUT} , for each.

Worksheet 31

Full-wave bridge rectifier

So what?

The circuit diagram for the full-wave rectifier is shown opposite.

It was pointed out that you cannot measure the input and output waveforms simultaneously.

To do that, you would connect one channel to points **A** and **C** to measure the input, and the other to points **B** and **D** to measure the output. However, most oscilloscopes have a common 0V connection between the two channels. This would connect points **C** and **D** together, say, and thus short-circuit one of the diodes.

The three oscilloscope traces show typical waveforms for:

- the AC signal going into the full-wave rectifier,
- the DC output
- the effect of the reservoir capacitor.

The DC output, in the middle trace, is an improvement on the half-wave output, in that current flows through the load throughout the AC cycle. Again, it is DC, because the trace never crosses the 0V line. However, again, a reservoir capacitor is needed to provide **smooth** DC.

For your records:

- Sketch a voltage-time graph of the full-wave rectified DC output signal, without smoothing.
- Compare the performance of the full-wave rectifier with the half-wave rectifier. Which circuit performed the best, and why?
- The output of this full-wave rectifier, using four diodes, is 1.4V less than the AC input peak value, and is not smooth DC.
- Again, a large capacitor can be connected across the output of the rectifier to smooth the DC signal produced.

